

FILE NO.

SERVICE MANUAL

Remote Control Digital Color Television

DP19647 (U.S.A.) (CANADA) ORIGINAL VERSION



Chassis No. P19647-00

NOTE: Match the Chassis No. on the unit's back cover with the Chassis No. in the Service Manual.

> If the Original Version Service Manual Chassis No. does not match the unit's, additional Service Literature is required. You must refer to "Notices" to the Original Service Manual prior to servicing the unit.

> > 1201/40

Servicing should be performed by only trained and qualified service personnel.

Contents

Safety Instructions 2
Service Adjustments 3 - 4
Power Failure Circuit 5
Mechanical Disassemblies 6 – 9
Chassis Electrical Parts List 10 – 24
Cabinet Parts List 25
Component and Test Point
Locations
Block Diagrams 28 – 35
Trouble Shooting Flow Charts 36 – 38
Control Port Functions39 – 40
Schematic Notes 41
Pin Layouts42
PC Board Connections and Locations 43
Capacitor and Resistor Codes44
Schematic Diagrams 45 – 52

Specifications Rever Beting

rower haung
50W (Avg), 1.0A (Max)
Antenna Input Impedance
UHF/VHF/CATV
Receiving Channel 2 - 13 (VHF),
14 - 69 (UHF),
01, 14-94, 95-125 (CATV)
1 - 135 (Digital)
Remote Ready 32 Key Remote Control
Sound Output 2.0 W/CH
Intermediate Frequency
Picture IF Carrier
Sound IF Carrier 41.25MHz
Color Sub Carrier 42.17MHz
LCD M190A1-L020
Cabinet Dimensions
Width 480mm
Height
Depth including base 184mm

SAFETY INSTRUCTIONS

SAFETY PRECAUTIONS

WARNING: The chassis of this receiver has a floating ground with the potential of one half the AC line voltage in respect to earth ground. Service should not be attempted by anyone not familiar with the precautions necessary when working on this type of equipment.

The following precautions must be observed:

- An isolation transformer must be connected in the power line between the receiver and the AC line before any service is performed on the receiver.
- 2. Comply with all caution and safety-related notes provided on the side of the cabinet, inside the cabinet, and on the chassis.
- When replacing a chassis in the cabinet, always be certain that all the protective devices are installed properly, such as control knobs, adjustment covers, shields and barriers.
- Before replacing the back cover of the set, thoroughly inspect the inside of the cabinet to see that no stray parts or tools have been left inside

Before returning any television to the customer, the service technician must perform the following safety checks to be sure that the unit is completely safe to operate without danger of electrical shock.

ANTENNA COLD CHECK


Remove AC plug from the 120 VAC outlet and place a jumper across the two blades. Connect one lead of an ohmmeter to the jumpered AC plug, and touch the other lead to each exposed antenna terminal (UHF and VHF antenna terminals). The resistance must measure between 1M ohm and 5.2M ohm. Any resistance value below or above this range indicates an abnormality which requires corrective action.

LEAKAGE CURRENT CHECK

Plug the AC line cord directly into a 120 VAC outlet. (Do not use an isolation transformer for this check.) Use an AC voltmeter, that has 5000 ohms per volt or more sensitivity. Connect a 1500 ohm 10 watt resistor, paralleled by a 0.15 µF 150 VAC capacitor, between a known good earth ground (water pipe, conduit, etc.) and all exposed metal parts of the cabinet (antennas, handle bracket, metal cabinet, screw heads, metal overlays, control shafts, etc.). Measure the AC voltage across the 1500 ohm resistor. The AC voltage should not exceed 750 mV. A reading exceeding 750 mV indicates that a dangerous potential exists. The fault must be located and corrected. Repeat the above test with the receiver power plug reversed.

NEVER RETURN A RECEIVER TO THE CUSTOMER WITHOUT TAKING THE NECESSARY CORRECTIVE ACTION.

READING SHOULD NOT EXCEED 750 mV.
AC VOLTMETER
(5000 ohms per volt or more sensitivity)

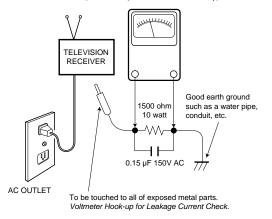

PRODUCT SAFETY NOTICE

When replacing components in a receiver, always keep in mind the necessary product safety precautions. Pay special attention to the replacement of components marked with a \triangle in the parts list and in the schematic diagrams. To ensure safe product operation, it is necessary to replace those components with the exact same PARTS.

SERVICING ELECTROSTATICALLY SENSATIVE DEVICES

Semiconductors (solid-state devices) that can be damaged by static electricity are referred to as Electrostatically Sensitive (ES) devices. Examples of typical ES devices are: Integrated Circuits (IC), Field-Effect Transistors (FET), and "chip" components. The following techniques should be observed strictly, to reduce the occurrence of semiconductor damage due to electrostatic discharge.

- Immediately prior to handling any semiconductor component or an assembly containing a semiconductor device or devices, discharge the electrostatic buildup on your body by touching a known earth ground. You may also obtain and wear a commercially available discharging wrist strap device.
 - CAUTION: Be sure to remove the wrist strap before applying power to any unit being serviced.
- After removing an ES equipped assembly, place it on a conductive surface, such as, aluminum foil, to prevent buildup or exposure to static electricity.
- Use only grounded-tip soldering irons to solder or unsolder ES devices.
- Use only anti-static solder removal devices. Some suction-type devices can generate static electricity adequate to damage ES devices.
- 5. A replacement ES device will come packaged in protective material (conductive foam, aluminum foil, or some comparable conductive material). Do Not remove an ES device from its protective packaging unless you are prepared to install it immediately.
- Precisely prior to removing an ES device from its protective packaging, touch the protective packaging to the chassis or assembly in which the device will be installed.
 - CAUTION: Be sure that no power is applied to the chassis or circuit assembly.
- 7. Incidental body movements, such as, lifting a foot from a carpeted floor or the rubbing of fabric together can generate static electricity sufficient to damage ES devices. Therefore, minimize all body movements while handling exposed (unpackaged) ES devices.

SERVICE ADJUSTMENTS

GENERAL

This set has an On-screen Service Menu system included in the CPU that allows remote operation for most of the service adjustments.

ON-SCREEN SERVICE MENU SYSTEM

1. Enter the Service Menu:

- Turn off the receiver and disconnect the AC power supply.
- While pressing the Volume (-) button on the television, reconnect the AC power supply. The Service
 Menu will now appear. The remote can now be used to make adjustments. See Figure 1 below.




Figure 1. Service Menu Display


2. Service Adjustments:

- Press the Channel ▲ or ▼ key to select the desired service menu item you want to adjust. See page 4 for the On-screen Service Menu.
- Use the **Volume** + or key to adjust the data. The + or – keys will increase or decrease the data sequentially.

3. Exit from the Service Menu:

 Press the MENU key to turn off the Service Menu display.

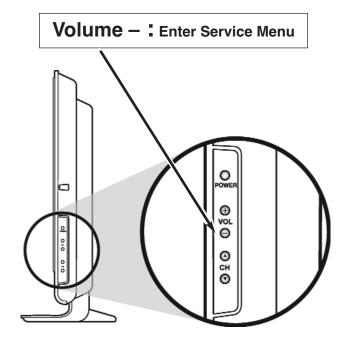

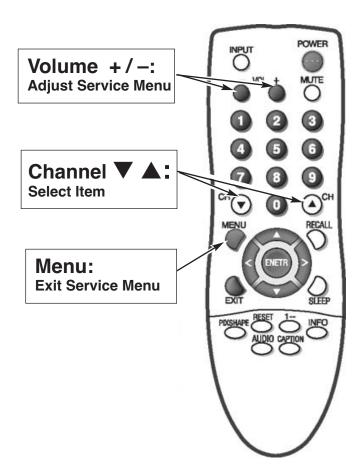

ON-SCREEN SERVICE MENU

Table 1. ON-SCREEN SERVICE MENU

When IC802 (EEPROM) is replaced, check the bus data to confirm they are the same as below. See page 3 for On-Screen Service Menu access and adjustments.

No.	Title	Initial Data	Note
086	VOL	30h	Volume setup inspection
087	OP1	00h	Option 1 Data
088	OP2	02h	Option 2 Data
101	1R00	00h	ROM Correction Data
102	1R02	00h	ROM Correction Data
\downarrow	\downarrow	<u> </u>	\downarrow
197	2R47	00h	ROM Correction Data
198	2R48	00h	ROM Correction Data

PROGRAM CODES

The microprossesor used in this model is a multi-purpose type and is used in several different models. To ensure proper operation and the correct features for your particular model, the program codes must be correct.

Note 1. Option Data 1 (NO. 087 OPT) should be hexadecimal 00. See 087 above. If this program code is wrong the TV will not operate properly.

Note 2. Option Data 2 (NO. 088 OP2) should be hexadecimal 02. See 088 above. If this program code is wrong the TV will not operate properly.

POWER FAILURE CIRCUIT

This unit is equipped with a Power Failure Detector function included in the CPU which checks for an abnormal condition in the chassis power supplies, including the power supply for the LVDS (LCD Panel).

If, while the power is on, a failure is caused by any of the following that results in a low voltage supply, the CPU will turn the unit off in 1.5 seconds to prevent further damage:

- Failure within the power supply circuits.
- A short circuit in the load side from the supply.
- 1. **Power Failure 1**: Detected voltage failure for digital circuits. (Connected to IC801 pin 36.)
- 2. **Power Failure 2:** Detected voltage failure for analog circuits. (Connected to IC801 pin 32.)


(Normal: High; Failure: Low)

If, while the power is off, the power is switched on and any of these failures remains uncorrected, the CPU will shut off the power within three seconds.

Check the following if the unit is turned off by the power failure detector.

- Disconnect the AC power cord (120V AC line) for at least 10 seconds.
- 2. Connect a DC Voltmeter to the circuits shown below.
- 3. Press the Power key and check for the proper voltage supplies.
- 4. If any of these voltages is low, the power failure detector should turn the unit off within three seconds.
- 5. Check all circuits shown below.

Note: This unit is equipped with a Power Surge Protection feature included in the CPU. If power failure occurs three times within 15 minutes, the CPU will stop functioning automatically to help prevent secondary damage. (TV will not turn on by pressing the power key.) To reset the operating programs within the CPU, disconnect the AC power cord for at least 10 seconds.

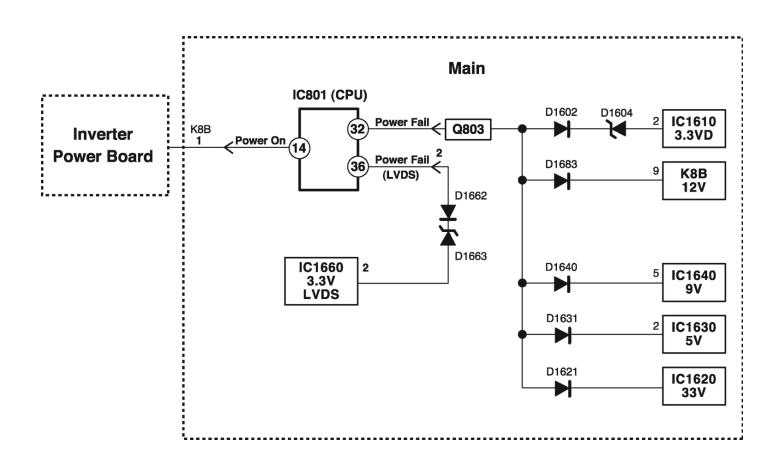


MECHANICAL DISASSEMBLY

CAUTION: This LCD TV uses several different kinds of screws. Using the correct screw is necessary to prevent damage. Lead wires must be redressed to their previous locations after servicing.

STAND REMOVAL

Note: Position TV face down on a padded or cushioned surface to protect the screen and finish.

Remove 2 screws to take the stand off.

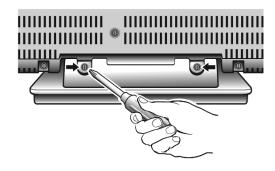


CABINET BACK REMOVAL

Remove 6 screws (A 3X10) and 1 screw (B 3X6).

Release the hooks in 2 places at the top by grasping the bottom of the back and lifting. Take the cabinet back off.

Note: The cabinet back can be removed without removing the stand.

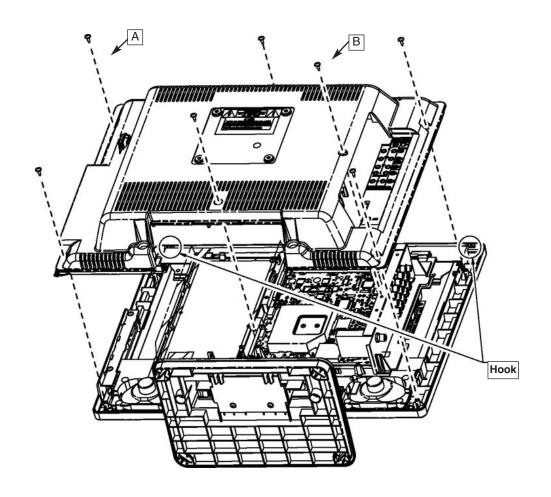


ELECTROSTATICALLY SENSATIVE DEVICES



Many solid-state devices (especially Integrated Circuits) are Electrostatically Sensitive, and, therefore, require special handling techniques as described under "Servicing Electrostatically Sensitive Devices," on page two in this service literature.


POWER BOARD REMOVAL

Remove 2 screws to take off the power unit.

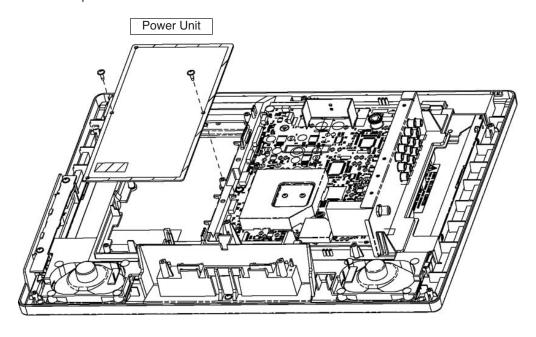

MAIN BOARD REMOVAL


Remove 4 screws to take off the main board.

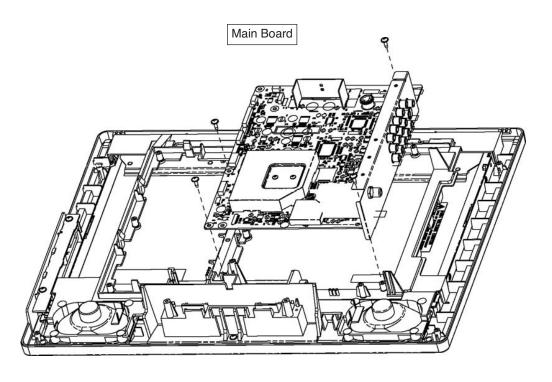

MECHANICAL DISASSEMBLY (CONT.)


MOUNTING BRACKET AND SPEAKER REMOVAL

Remove 11 screws to take off the mouniting bracket and the left and right speakers.

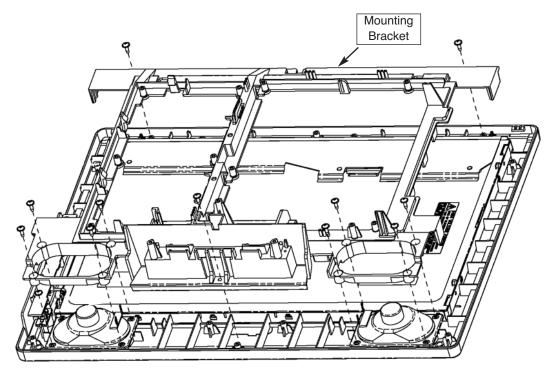


SPEAKER REMOVAL

Lift both speakers from cabinet.

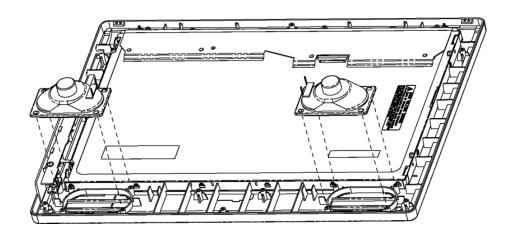


LCD PANEL REMOVAL

Lift panel from cabinet.

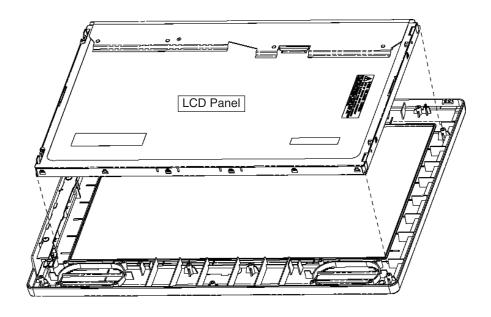

CONTROL BOARD REMOVAL

Remove 2 screws to take off the control board with the button assembly parts.

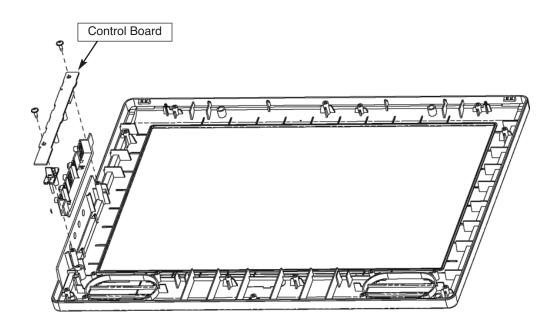

CHASSIS ELECTRICAL PARTS LIST

CAUTION: To Protect against electrical shock and for continued product safety, refer to SAFETY PRECAUTIONS and PRODUCT SAFETY NOTICE on Page 2.

PRODUCT SAFETY NOTICE

PRODUCT SAFETY SHOULD BE CONSIDERED WHEN A REPLACEMENT IS MADE IN ANY AREA OF A RECEIVER. COMPONENTS INDICATED BY A \triangle IN THIS PARTS LIST AND THE SCHEMATIC DIAGRAM DESIGNATE COMPONENTS IN WHICH SAFETY CAN BE OF SPECIAL SIGNIFICANCE. IT IS PARTICULARLY RECOMMENDED THAT ONLY PARTS DESIGNATED ON THE FOLLOWING PARTS LIST BE USED FOR COMPONENT REPLACEMENT DESIGNATED BY A \triangle . NO DEVIATIONS FROM RESISTANCE, WATTAGE, AND VOLTAGE RATINGS MAY BE MADE FOR REPLACEMENT ITEMS DESIGNATED BY A \triangle .

Note: Schematic part location numbers may not always match with the part descriptions. The part descriptions are correct and should be used.

Schematic Location	Part No.	Description
-----------------------	----------	-------------

Schematic Location Part No. Description


RESISTORS

CAPACITORS

NOTES:

Read description of the Capacitor as follows:

(Example)

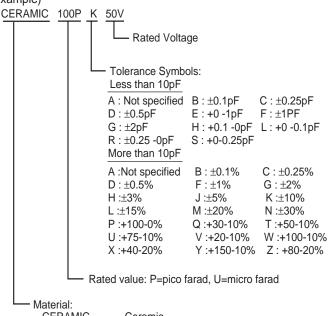


CERAMIC.......... Ceramic
MT-PAPER....... Metallized Paper
POLYESTER..... Polyester
MT-POLYEST.... Metallized Polyester
POLYPRO...... Polypropylene
MT-POLYPRO.... Metallized Polypropylene
COMPO FILM... Composite Film
MT-COMPO.... Metallized Composite
STYRENE.... Styrene
TA-SOLID.... Tantalum Solid
AL-SOLID.... Aluminium Solid
ELECT..... Electrolytic
NP-ELECT.... Non-polarised Electrolytic
OS-SOLID.... Aluminium Solid with Organic

Semiconductive Electrolytic

NOTES:

Read description of the Resistor as follows:

FUSIBLE RES Fusible

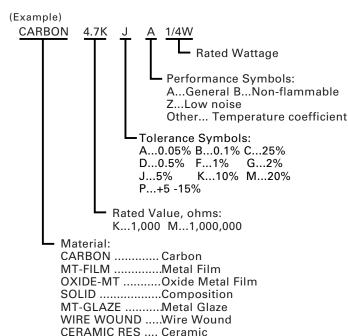

Schematic Location	Part No.	Des	scription		Schematic Location	Part No.	Des	scription	
	CAPACITOR	RS			C719	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C001	CPXLB1C100YAN	NP-ELECT	10U M	16V	C720	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
	CPXLB1C100ZAN	NP-ELECT	10U M	16V	C721	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C002	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C722	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C006	CEXLB1H4R7VDN	ELECT	4.7U M	50V	C723	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
	CEXLB1H4R7WAN	ELECT	4.7U M	50V	C724	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C007	CEXLB1V470VDN	ELECT	47U M	35V	C725	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
	CEXLB1V470WAN	ELECT	47U M	35V	C726	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C008	CK1H102KLZBNG	CERAMIC	1000P K	50V	C727	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C009	CK1H102KLZBNG	CERAMIC	1000P K	50V	C728	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C010	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C729	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C011	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C800	RGFR000ZTCANL	MT-GLAZE	0.000 ZA	1/10W
C013	CPXLB1C100YAN	NP-ELECT	10U M	16V	C804	RGF1003JTCANL	MT-GLAZE	100K JA	1/10W
	CPXLB1C100ZAN	NP-ELECT	10U M	16V	C805	CC1H220JLZCNG	CERAMIC	22P J	50V
C015	CEXLB1C222VDN	ELECT	2200U M	16V	C806	CC1H220JLZCNG	CERAMIC	22P J	50V
C016	CEXLB1H100VDN	ELECT	10U M	50V	C807	CK1H103ZLZFNG	CERAMIC	0.01U Z	50V
	CEXLB1H100WAN	ELECT	10U M	50V	C811	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C017	CEXLB1H100VDN	ELECT	10U M	50V	C813	CEXLB1V470VDN	ELECT	47U M	35V
	CEXLB1H100WAN	ELECT	10U M	50V		CEXLB1V470WAN	ELECT	47U M	35V
C018	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C814	CK1H222KLZBNG	CERAMIC	2200P K	50V
C019	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C815	CC1H220JLZCNG	CERAMIC	22P J	50V
C681	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C816	CC1H220JLZCNG	CERAMIC	22P J	50V
C682	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C820	CK1H103ZLZFNG	CERAMIC	0.01U Z	50V
C683	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C825	CC1H470JLZCNG	CERAMIC	47P J	50V
C684	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C826	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C685	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C827	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C687	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C829	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C688	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C834	CEXLB0J221VDN	ELECT	220U M	6.3V
C690	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		CEXLB0J221WAN	ELECT	220U M	6.3V
C691	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C835	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C693	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C836	CC1H120JLZCNG	CERAMIC	12P J	50V
C694	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C837	CC1H120JLZCNG	CERAMIC	12P J	50V
C696	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C839	CK1H103ZLZFNG	CERAMIC	0.01U Z	50V
C697	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C840	CK1H333KLZBNG	CERAMIC	0.033U K	50V
C698	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C841	CEXLB1H2R2VDN	ELECT	2.2U M	50V
C700	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	0040	CEXLB1H2R2WAN	ELECT	2.2U M	50V
C701	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C842	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C702	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C1000	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C703	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C1001	CEXLB1H100VDN	ELECT	10U M	50V
C704	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	01000	CEXLB1H100WAN	ELECT	10U M	50V
C705	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C1002	CEXLB1H100VDN	ELECT	10U M	50V
C706	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	01002	CEXLB1H100WAN CEXLB1H4R7VDN	ELECT ELECT	10U M 4.7U M	50V
C707	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C1003		ELECT	4.70 M	50V 50V
C708	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C1004	CEXLB1H4R7WAN CEXLB1H4R7VDN	ELECT	4.70 M	50V 50V
C709	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	61004	CEXLB1H4R7WAN	ELECT	4.70 M	50V 50V
C710	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C1011	CEXLB1H4R7VDN	ELECT	4.70 M	50V
C711	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	GIUII		ELECT	4.70 M	50V
C712	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C1012	CEXLB1H4R7WAN CEXLB1H4R7VDN	ELECT	4.70 M	50V 50V
C713	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	01012	CEXLB1H4R7WAN	ELECT	4.70 M	50V
C714	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C1013	CEXLB1H4R7VDN	ELECT	4.70 M	50V
C715	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	01013	CEXLB1H4R7WAN	ELECT	4.70 M	50V
C716	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C1014	CEXLB1H4R7VDN	ELECT	4.70 M	50V
C717	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	01017	CEXLB1H4R7WAN	ELECT	4.70 M	50V
C718	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		OFVED HILLIA MVII	LLLUI	-T. 1 U IVI	JU V

Schematic Location	Part No.	Des	scription		Schematic Location	Part No.	De	scription	
C1015	CEXLB1H4R7VDN	ELECT	4.7U M	50V	C1801	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
	CEXLB1H4R7WAN	ELECT	4.7U M	50V	C1902	CEXLB1H100VDN	ELECT	10U M	50V
C1016	CEXLB1H4R7VDN	ELECT	4.7U M	50V		CEXLB1H100WAN	ELECT	10U M	50V
	CEXLB1H4R7WAN	ELECT	4.7U M	50V	C1904	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C1017	CEXLB1H4R7VDN	ELECT	4.7U M	50V	C1905	CC1H470JLZCNG	CERAMIC	47P J	50V
	CEXLB1H4R7WAN	ELECT	4.7U M	50V	C3200	CK1A105ZLZFNG	CERAMIC	1U Z 10	V
C1201	CEXLB1V470VDN	ELECT	47U M	35V	C3201	CK1A105ZLZFNG	CERAMIC	1U Z 10	V
	CEXLB1V470WAN	ELECT	47U M	35V	C3202	CK1A105ZLZFNG	CERAMIC	1U Z 10	V
C1202	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C3203	CK1A105ZLZFNG	CERAMIC	1U Z 10	V
C1205	CEXLB1V470VDN	ELECT	47U M	35V	C3204	CK1H223KLZBNG	CERAMIC	0.022U K	50V
	CEXLB1V470WAN	ELECT	47U M	35V	C3205	CK1H222KLZBNG	CERAMIC	2200P K	50V
C1251	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C3206	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C1600	CEXLB1E102VDN	ELECT	1K U M	25V	C3208	CK1A105ZLZFNG	CERAMIC	1U Z	10V
C1601	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C3209	CK1A105ZLZFNG	CERAMIC	1U Z	10V
C1602	CEXLB0J102VDN	ELECT	1000U M	6.3V	C3210	CK1A105ZLZFNG	CERAMIC	1U Z	10V
	CEXLB0J102WAN	ELECT	1000U M	6.3V	C3211	CK1A105ZLZFNG	CERAMIC	1U Z	10V
C1603	CK1A105ZLZFNG	CERAMIC	1U Z	10V	C3212	CK1A105ZLZFNG	CERAMIC	1U Z	10V
C1604	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C3213	CK1A105ZLZFNG	CERAMIC	1U Z	10V
C1610	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C3214	CK1A105ZLZFNG	CERAMIC	1U Z	10V
C1611	CK1A105ZLZFNG	CERAMIC	1U Z	10V	C3215	CK1H222KLZBNG	CERAMIC	2200P K	50V
C1613	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C3216	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C1614	CEXLB0J221VDN	ELECT	220U M	6.3V	C3218	CK1C224KLZBNG	CERAMIC	0.22U K	16V
	CEXLB0J221WAN	ELECT	220U M	6.3V	C3219	CK1A105ZLZFNG	CERAMIC	1U Z	10V
C1615	CEXLB0J221VDN	ELECT	220U M	6.3V	C3220	CK1A105ZLZFNG	CERAMIC	1U Z	10V
	CEXLB0J221WAN	ELECT	220U M	6.3V	C3221	CK1A105ZLZFNG	CERAMIC	1U Z	10V
C1618	CK1A105ZLZFNG	CERAMIC	1U Z	10V	C3222	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C1619	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C3223	CEXLB1C222VDN	ELECT	2200U M	16V
C1620	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C5503	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C1621	CK1A105ZLZFNG	CERAMIC	1U Z	10V	C5507	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C1622	CK1A105ZLZFNG	CERAMIC	1U Z	10V	C5508	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C1623	CEXLB1H100VDN	ELECT	10U M	50V	C5509	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
	CEXLB1H100WAN	ELECT	10U M	50V	C5510	CK1A105ZLZFNG	CERAMIC	1U Z	10V
C1630	CEXLB1C101VDN	ELECT	100U M	16V	C5511	CEXLB1H100VDN	ELECT	10U M	50V
	CEXLB1C101WAN	ELECT	100U M	16V		CEXLB1H100WAN	ELECT	10U M	50V
C1631	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C5512	CEXLB1H100VDN	ELECT	10U M	50V
C1632	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		CEXLB1H100WAN	ELECT	10U M	50V
C1633	CEXLB0J102VDN	ELECT	1000U M	6.3V	C5513	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
	CEXLB0J102WAN	ELECT	1000U M	6.3V	C5515	CC1H470JLZCNG	CERAMIC	47P J	50V
C1634	CK1A105ZLZFNG	CERAMIC	1U Z	10V	C5516	CC1H470JLZCNG	CERAMIC	47P J	50V
C1640	CEXLB1C101VDN	ELECT	100U M	16V	C5517	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
0.10.11	CEXLB1C101WAN	ELECT	100U M	16V	C5518	CEXLB1H100VDN	ELECT	10U M	50V
C1641	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		CEXLB1H100WAN	ELECT	10U M	50V
C1642	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C5519	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C1643	CEXLB1C101VDN	ELECT	100U M	16V	C5520	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
0.1.000	CEXLB1C101WAN	ELECT	100U M	16V	C5521	CEXLB1H100VDN	ELECT	10U M	50V
C1660	CEXLB1V471WAN	ELECT	470U M	35V		CEXLB1H100WAN	ELECT	10U M	50V
C1661	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C5522	CK1A105ZLZFNG	CERAMIC	1U Z	10V
C1662	CK1H103ZLZFNG	CERAMIC	0.01U Z	50V	C5523	CK1A105ZLZFNG	CERAMIC	1U Z	10V
C1663	CC1H470JLZCNG	CERAMIC	47P J	50V	C5529	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C1664	CK1H103ZLZFNG	CERAMIC	0.01U Z	50V	C5531	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C1665	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C5532	CK1A105ZLZFNG	CERAMIC	1U Z	10V
C1666	CEXLB1E102VDN	ELECT	1K U M	25V	C5534	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C1667 C1800	CK1H104ZLZFNG CK1H104ZLZFNG	CERAMIC CERAMIC	0.1U Z 0.1U Z	50V 50V	C5535	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V

Schematic Location	Part No.	De	scription		Schematic Location	Part No.	De	escription	
C5536	CEXLB0J221VDN	ELECT	220U M	6.3V	C5724	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
	CEXLB0J221WAN	ELECT	220U M	6.3V	C5725	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5539	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C5726	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5540	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C5727	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5541	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C5728	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5542	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C5729	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5543	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C5751	CEXLB1V470VDN	ELECT	47U M	35V
C5544	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		CEXLB1V470WAN	ELECT	47U M	35V
C5545	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C5752	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5546	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C5753	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5547	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C5754	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5548	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C5755	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5549	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C5801	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5550	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C5803	CC1H120JLZCNG	CERAMIC	12P J	50V
C5551	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C5804	CC1H150JLZCNG	CERAMIC	15P J	50V
C5552	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C5805	CC1H270JLZCNG	CERAMIC	27P J	50V
C5553	CEXLB1V470VDN	ELECT	47U M	35V	C5806	CC1H680JLZCNG	CERAMIC	68P J	50V
	CEXLB1V470WAN	ELECT	47U M	35V	C5807	CK1C224KLZBNG	CERAMIC	0.22U K	16V
C5554	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C5808	CK1C224KLZBNG	CERAMIC	0.22U K	16V
C5555	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C5809	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5557	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C5812	CC1H120JLZCNG	CERAMIC	12P J	50V
C5558	CK1H102KLZBNG	CERAMIC	1000P K	50V	C5813	CC1H150JLZCNG	CERAMIC	15P J	50V
C5559	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C5814	CC1H270JLZCNG	CERAMIC	27P J	50V
C5560	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C5815	CC1H680JLZCNG	CERAMIC	68P J	50V
C5561	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C5816	CK1C224KLZBNG	CERAMIC	0.22U K	16V
C5562	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C5901	CK1A474KLZBNG	CERAMIC	0.47U K	10V
C5563	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C5904	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5564	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C5905	CEXLB1H100VDN	ELECT	10U M	50V
C5565	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		CEXLB1H100WAN	ELECT	10U M	50V
C5566	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C5959	CC1H12OJLZCNG	CERAMIC	12P J	50V
C5567	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C6051	CK1A105ZLZFNG	CERAMIC	1U Z	10V
C5568	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C6052	CK1A105ZLZFNG	CERAMIC	1U Z	10V
C5570	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C6053	CEXLB0J221VDN	ELECT	220U M	6.3V
C5572	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	00054	CEXLB0J221WAN	ELECT	220U M	6.3V
C5573	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C6054	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5574	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C6086	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5575	CK1A105ZLZFNG	CERAMIC	1U Z	10V	C6087	CEXLB1V470VDN	ELECT	47U M	35V
C5576	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	00000	CEXLB1V470WAN	ELECT	47U M	35V
C5580	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C6090	CEXLBOJ221VDN	ELECT	220U M	6.3V
C5581	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	00004	CEXLB0J221WAN	ELECT	220U M	6.3V
C5582	CKOJ106KGMBNG	CERAMIC	10U K	6.3V	C6091	CK1A105ZLZFNG	CERAMIC	1U Z	10V
C5583	CK0J106KGMBNG	CERAMIC	10U K	6.3V	C6094	CK1A105ZLZFNG	CERAMIC	1U Z	10V
C5701	CEXLB1V470VDN	ELECT	47U M	35V	C6099	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
05700	CEXLB1V470WAN	ELECT	47U M	35V	C6100	CC1H180JLZCNG	CERAMIC	18P J	50V
C5702	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C6101	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5703	CK0J475KLZBNG	CERAMIC	4.7U K	6.3V	C6102	CC1H180JLZCNG	CERAMIC	18P J	50V
C5704	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C6103	CK1H104ZLZFNG CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5705	CK1H104ZLZFNG	CERAMIC	0.1U Z 0.1U Z	50V 50V	C6104 C6106		CERAMIC	0.1U Z 56P J	50V
C5706	CK1H104ZLZFNG	CERAMIC				CC1H560JLZCNG	CERAMIC		50V
C5707 C5708	CK1H104ZLZFNG CK1H104ZLZFNG	CERAMIC CERAMIC	0.1U Z 0.1U Z	50V 50V	C6108 C6110	CK1H104ZLZFNG CK1H104ZLZFNG	CERAMIC CERAMIC	0.1U Z 0.1U Z	50V 50V
C5708 C5709	CK1H104ZLZFNG CK1H104ZLZFNG	CERAMIC	0.10 Z 0.1U Z	50V 50V	C6114	CK1H104ZLZFNG CK1H104ZLZFNG	CERAMIC	0.10 Z 0.1U Z	50V 50V
C5709 C5721	CKOJ475KLZBNG	CERAMIC	4.7U K	6.3V	C6114 C6116	CK1H104ZLZFNG CK1H103ZLZFNG	CERAMIC	0.10 Z 0.01U Z	50V 50V
C5721 C5722	CK1H104ZLZFNG	CERAMIC	4.70 K 0.1U Z	50V	C6118	CK1A105ZLZFNG	CERAMIC	0.010 Z 1U Z	10V
00122	OKTITIO4ZEZING	OLITAMIO	0.10 2	JU V	00110	ONTATUULLETING	OLITAIVIIO	10 2	100

Schematic Location	Part No.	De	scription		Schen Locati		Part No.	De	escription	
C6120	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C623	31	CC1H220JLZCNG	CERAMIC	22P J	50V
C6122	CK1A105ZLZFNG	CERAMIC	1U Z	10V	C623	32	CC1H220JLZCNG	CERAMIC	22P J	50V
C6124	CK1H103ZLZFNG	CERAMIC	0.01U Z	50V	C623	33	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C6126	CEXLB0J221VDN	ELECT	220U M	6.3V	C623	34	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
	CEXLB0J221WAN	ELECT	220U M	6.3V	C623	35	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C6128	CEXLB0J221VDN	ELECT	220U M	6.3V	C623	36	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
	CEXLB0J221WAN	ELECT	220U M	6.3V	C623	37	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C6130	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C623	38	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C6132	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C623	39	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C6134	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C624	11	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C6138	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C624	12	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C6140	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C624	13	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C6142	CK1A105ZLZFNG	CERAMIC	1U Z	10V	C624	14	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C6144	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C624	15	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C6151	CC1H220JLZCNG	CERAMIC	22P J	50V	C624	16	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C6153	CC1H220JLZCNG	CERAMIC	22P J	50V	C625	50	CEXLB1H4R7VDN	ELECT	4.7U M	50V
C6155	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V			CEXLB1H4R7WAN	ELECT	4.7U M	50V
C6156	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C625	51	CEXLB1H100VDN	ELECT	10U M	50V
C6158	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V			CEXLB1H100WAN	ELECT	10U M	50V
C6160	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C625	52	CEXLB1C101VDN	ELECT	100U M	16V
C6162	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V			CEXLB1C101WAN	ELECT	100U M	16V
C6170	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C625	53	CEXLB1H4R7VDN	ELECT	4.7U M	50V
C6171	CEXLB0J221VDN	ELECT	220U M	6.3V			CEXLB1H4R7WAN	ELECT	4.7U M	50V
	CEXLB0J221WAN	ELECT	220U M	6.3V	C625		CK1A474KLZBNG	CERAMIC	0.47U K	10V
C6172	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C625		CK0J475KLZBNG	CERAMIC	4.7U K	6.3V
C6174	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C625		CK1H123KLZBNG	CERAMIC	0.012U K	50V
C6176	CEXLB0J221VDN	ELECT	220U M	6.3V	C625		CK1H562KLZBNG	CERAMIC	5600P K	50V
	CEXLB0J221WAN	ELECT	220U M	6.3V	C625		CK0J475KLZBNG	CERAMIC	4.7U K	6.3V
C6177	CEXLB1H100VDN	ELECT	10U M	50V	C625		CK0J475KLZBNG	CERAMIC	4.7U K	6.3V
	CEXLB1H100WAN	ELECT	10U M	50V	C626		CK0J475KLZBNG	CERAMIC	4.7U K	6.3V
C6178	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C626		CK1H272KLZBNG	CERAMIC	2700P K	50V
C6180	CK1H102KLZBNG	CERAMIC	1000P K	50V	C626		CK1H473KLZBNG	CERAMIC	0.047U K	50V
C6181	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C626		CT1A3R3KDRANG	TA-SOLID	3.3U K	10V
C6201	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C626		CK1H472KLZBNG	CERAMIC	4700P K	50V
C6202	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C626		CK0J475KLZBNG	CERAMIC	4.7U K	6.3V
C6203	CK1H473KLZBNG	CERAMIC	0.047U K	50V	C626		CK1A105ZLZFNG	CERAMIC	1U Z	10V
C6204	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C626		CT1A100KDRANG	TA-SOLID	10U K	10V
C6205	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C629	91	CEXLB1H4R7VDN	ELECT	4.7U M	50V
C6206	CK1H473KLZBNG	CERAMIC	0.047U K	50V	0000	00	CEXLB1H4R7WAN	ELECT	4.7U M	50V
C6207	CK1H103ZLZFNG	CERAMIC	0.01U Z	50V	C629	92	CEXLB1H4R7VDN	ELECT	4.7U M	50V
C6208	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	000		CEXLB1H4R7WAN	ELECT	4.7U M	50V
C6209	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C630		CC1H471JLZCNG	CERAMIC	470P J	50V
C6211	CK1H473KLZBNG	CERAMIC	0.047U K	50V	C630		CC1H151JLZCNG	CERAMIC	150P J	50V
C6212	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C630		CC1H151JLZCNG	CERAMIC	150P J	50V
C6213	CK1H473KLZBNG	CERAMIC	0.047U K	50V	C630		CC1H151JLZCNG	CERAMIC	150P J	50V
C6214	CK1H473KLZBNG	CERAMIC	0.047U K	50V	C632		CC1H471JLZCNG	CERAMIC	470P J	50V
C6215	CK1H103ZLZFNG	CERAMIC	0.01U Z	50V	C632		CC1H151JLZCNG	CERAMIC	150P J	50V
C6216	CK1H473KLZBNG	CERAMIC	0.047U K	50V	C632		CC1H151JLZCNG	CERAMIC	150P J	50V
C6217	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C632		CC1H151JLZCNG	CERAMIC	150P J	50V
C6218	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C634	+ I	CEXLB1C101VDN	ELECT	100U M	16V
C6219	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	000	10	CEXLB1C101WAN	CEDAMIC	100U M	16V
C6221	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C634		CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C6230	CEXLB0J221VDN CEXLB0J221WAN	ELECT ELECT	220U M 220U M	6.3V 6.3V	C634	+0	CC1H471JLZCNG	CERAMIC	470P J	50V

					1		_		
Schematic Location	Part No.	Des	cription			Schematic Location	Part No.	Des	scription
C6344	CEXLB0J221VDN	ELECT	220U M	6.3V		IC5720	QXXAVC524M	IC EDD1216/	AATA-6B-E
	CEXLB0J221WAN	ELECT	220U M	6.3V		IC5750	QXXAAJQ0788	IC S29GL016	6A90-US1D
C6354	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V			IC5900	QM51957BFPP	IC M51957B	FP	
C6355	CK1H104ZLZFNG	CERAMIC	CERAMIC 0.1U Z 50V			IC6050	QPQ070XNA1ZPP	IC PQ070XN	A1ZPH
C6361	CK1A105ZLZFNG	CERAMIC	1U Z	10V		IC6090	QPQ070XNA1ZPP	IC PQ070XN	A1ZPH
C6362	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		IC6100	QCAS-220/CM	IC CAS-220/	
C6363	CEXLB1H4R7VDN	ELECT	4.7U M	50V		IC6130	QTC7SZ08FUP	IC TC7SZ08F	
	CEXLB1H4R7WAN	ELECT	4.7U M	50V			QTC7S08FUP	IC TC7S08FL	,
C6364	CEXLB1H4R7VDN	ELECT	4.7U M	50V		IC6200	QXXAVC650M	IC ISL98001	
	CEXLB1H4R7WAN	ELECT	4.7U M	50V		IC6250	QCXA2207NP	IC CXA2207	
C6365	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		IC6300	QNJM4558MP	IC NJM4558	
C6565	CK0J475KLZBNG	CERAMIC	4.7U K	6.3V		IC6301	QCD4052BNSR-P	IC CD4052BI	
	DIODEO						QTC4052BFP	IC TC4052BF	-EL
	DIODES						0011.0		
D801	DD1SS355G	DIODE 1SS35					COILS		
D802	DZUDZS6.2BG	ZENER DIODI		IE-17		L001	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W
D1600	DDD1FM3G	DIODE D1FM				L002	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W
D1602	DD1SS355G	DIODE 1SS35				L003	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W
D1604	DZUDZS3.0BG	ZD UDZS3.0E				L004	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W
D1610	DZUDZS3.9BG	ZD UDZS-TE-				L1901	1AV4L2B95R6KN	INDUCTOR,	
D1620	DDD1FH3G	DIODE D1FH3				1.1000	1AV4L2GU5R6KN	INDUCTOR,	
D1621	DD1SS355G	DIODE 18835				L1000	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W
D1630	DDD1FH3G	DIODE D1FH3				L1201	1AV4L2FB3R3MG	INDUCTOR,	
D1631	DD1SS355G	DIODE 18835				L1202	1AV4L2FB3R3MG	INDUCTOR,	
D1640	DD1SS355G DDD1FM3G	DIODE 1SS355 TE-17 DIODE D1FM3			L1600 L1601	RGFR000ZTAANL	MT-GLAZE MT-GLAZE	0.000 ZA 1/10W	
D1660			DIODE 1SS355 TE-17			L1601	RGFR000ZTAANL		0.000 ZA 1/10W
D1661 D1683	DD1SS355G DD1SS355G	DIODE 188355 TE-17			L1610	1AV4L2WK150MN RGFR000ZTAANL	INDUCTOR, MT-GLAZE	0.000 ZA 1/10W	
D1003	DLSLP-381C51N	LED SLP-381C-51			L1611	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W	
D1302	DLSLR343MC3FN	LED SLR-343MC3F			L1612	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W	
D3216	DDRB551V-30-G	DIODE RB55		,		L1615	1LB4L26B0740G	INDUCTOR,	
D0210	DDIIDOOTV 00 G	DIODE HD33	1 V 30 1L 17			L1616	1LB4L26B0740G	INDUCTOR,	
	INTEGRATI	ED CIRCU	ITS			L1617	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W
IC001	QLA42032-EN	IC LA42032-E				L1618	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W
IC801	QXXAAJQ0785	IC LC87F416		001		L1619	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W
	QXXAVC880M	IC LC874164				L1620	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W
IC802	QXXAVC820P	IC AT24C04N				L1621	1AV4L2WK560MN	INDUCTOR,	
	QXXAVC844P	IC CAT24C04				L1622	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W
	QXXGA0500017P	IC LE24C041	1M-TLM-E-(5		L1630	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W
IC805	QTC7SH08FUP	IC TC7SH08F				L1631	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W
IC806	QTC7SET08FU-P	IC TC7SET08				L1632	1AV4L2WK560MN	INDUCTOR,	
IC1201	QCD4052BNSR-P	IC CD4052BN				L1640	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W
	QTC4052BFP	IC TC4052BF				L1656	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W
IC1251	QCD4052BNSR-P	IC CD4052BN	ISR			L1657	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W
	QTC4052BFP	IC TC4052BF	-EL			L1658	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W
IC1600	QLA5774MPEP	IC LA5774MF	P-DL-E			L1659	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W
IC1610	QPQ070XNA1ZPP	IC PQ070XNA	A1ZPH			L1660	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W
IC1620	QXXAVC830P	IC PQ6CU12>	(2APQ			L1661	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W
IC1630	QPQ1CZ41H2FPK	IC PQ1CZ41F	I2FPH			L1663	1AV4L2WK680MN	INDUCTOR,	68U M
IC1640	QXXAVC692P	IC PQ1LAX95	MSPQ			L1665	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W
IC1660	QLA5774MPEP	IC LA5774MF	P-DL-E			L1666	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W
IC3200	QNJW1142AVP	IC NJW1142	٩V			L1670	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W
IC5500	QXXAVC847M	IC ZR39660B	GCG-B3			L1673	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W
IC5700	QXXAVC524M	IC EDD1216A	ATA-6B-E			L1680	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W

Schematic Location	Part No.	Des	cription		Schematic Location	Part No.	Description
L1681	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W	-	L5515	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1682	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W		L5516	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1683	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W		L5521	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1684	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W		L5522	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1685	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W		L5523	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1686	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W		L5524	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1687	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W		L5525	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1688	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W		L5526	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1689	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W		L5545	1AV4L2WK150MN	INDUCTOR, 15U M
L1690	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W		L5553	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1691	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W		L5565	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1692	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W		L5566	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1693	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W		L5751	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1694	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W		L5800	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1696	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W		L5801	1AV4L2GA150JG	INDUCTOR, 15U J
L1697	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W		L5802	1AV4L2GA150JG	INDUCTOR, 15U J
L1698	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W		L6050	1LB4L26B0740G	INDUCTOR, 220 OHM
L1699	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W		L6051	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1700	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W		L6052	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1701	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W		L6091	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1702	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W		L6100	1AV4L2GAR22JG	INDUCTOR, 0.22U J
L1703	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W		L6104	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1704	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W		L6106	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1705	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W		L6108	1LB4L26B0740G	INDUCTOR, 220 OHM
L1706	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W		L6110	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1707	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W		L6112	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1709	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W		L6116	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1718	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W		L6118	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1800	1AV4L2FB3R3MG	INDUCTOR, 3			L6120	1AV4L26B1940G	INDUCTOR, 120 OHM
L1801	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W			1LB4L26B0700G	INDUCTOR, 120 OHM
L1802	1AV4L2FB3R3MG	INDUCTOR, 3			L6122	1AV4L26B1940G	INDUCTOR, 120 OHM
L1803	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W		1.0450	1LB4L26B0700G	INDUCTOR, 120 OHM
L2001	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W		L6150	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L2002	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W		L6151	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L2003	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W		L6153	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L2004	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W		L6154	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L2006	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W		L6155	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L2007	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W		L6156	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L2009	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W		L6157	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L2011	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W		L6158	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L2012	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W		L6159	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L2014	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W		L6160	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L2015	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W		L6161	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L2016	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W		L6162	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L2017	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W		L6165	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L5500	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W		L6166	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L5501	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W		L6167	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L5503	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W		L6168	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L5504	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W		L6169	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L5505	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W		L6170	1AV4L2FB3R3MG	INDUCTOR, 3.3U M
L5506	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W		L6171	1AV4L2FB3R3MG	INDUCTOR, 3.3U M
L5508	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W		L6172	1AV4L2FB3R3MG	INDUCTOR, 3.3U M
L5511	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W		L6174	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L5512	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W		L6176	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W

Schematic Location	Part No.	Des	cription		Schematic Location	Part No.	Des	scription
L6184	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W	•	L6568	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W
L6185	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W		L6569	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W
L6186	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W					
L6187	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W			TRANSIST	ORS	
L6188	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W		Q101	T2SC2412K-R-P	TR 2SC2412	K-T-96-R
L6189	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W			T2SC2412K-S-P	TR 2SC2412	K-T-96-S
L6201	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W			T2SC2812-L6-P	TR 2SC2812	
L6202	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W			T2SC2812-L7-P	TR 2SC2812	-L7-TB
L6203	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W			T2SC2812N-L6P	TR 2SC2812	N-L6-TB
L6204	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W			T2SC3928A1R-P	TR 2SC3928	
L6206	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W			T2SC3928A1S-P	TR 2SC3928	
L6210	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W		Q801	T2SC2412K-R-P	TR 2SC2412	
L6211	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W			T2SC2412K-S-P	TR 2SC2412	
L6212	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W			T2SC2812-L6-P	TR 2SC2812	
L6213	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W			T2SC2812-L7-P	TR 2SC2812	
L6214	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W			T2SC2812N-L6P	TR 2SC2812	
L6215	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W			T2SC3928A1R-P	TR 2SC3928	
L6216	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W			T2SC3928A1S-P	TR 2SC3928	
L6217	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W		Q803	T2SC2412K-R-P	TR 2SC2412	
L6220	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W			T2SC2412K-S-P	TR 2SC2412	
L6221	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W			T2SC2812-L6-P	TR 2SC2812	
L6222	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W			T2SC2812-L7-P	TR 2SC2812	
L6223	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W			T2SC2812N-L6P	TR 2SC2812	
L6224	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W			T2SC3928A1R-P	TR 2SC3928	
L6225	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W			T2SC3928A1S-P	TR 2SC3928	
L6226	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W		Q804	T2SA1037AK-RP	TR 2SA1037	
L6227	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W			T2SA1037AK-SP	TR 2SA1037	
L6250	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W			T2SA1037K-R-P	TR 2SA1037	
L6301	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W			T2SA1037K-S-P	TR 2SA1037	
L6354	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W			T2SA1179-M6-P	TR 2SA1179	
L6355	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W			T2SA1179-M7-P	TR 2SA1179	
L6356	1LB4L26B0740G	INDUCTOR, 2				T2SA1179N-M6P	TR 2SA1179	
L6357	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W			T2SA1235A1E-P	TR 2SA1235	
L6358	1AV4L3EK201-G	IMPEDANCE,			0005	T2SA1235A1F-P	TR 2SA1235	
L6359	1AV4L3EK201-G	IMPEDANCE,			Q805	T2SC2412K-R-P	TR 2SC2412	
L6360	1AV4L3EK201-G	IMPEDANCE,				T2SC2412K-S-P	TR 2SC2412	
L6361	1AV4L3EK201-G	IMPEDANCE,				T2SC2812-L6-P	TR 2SC2812	
L6362	1AV4L3EK201-G	IMPEDANCE,				T2SC2812-L7-P	TR 2SC2812	
L6393	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W			T2SC2812N-L6P	TR 2SC2812	
L6394	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W			T2SC3928A1R-P	TR 2SC3928 TR 2SC3928	
L6395	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W		01006	T2SC3928A1S-P		
L6396	RGFR000ZTAANL	MT-GLAZE MT-GLAZE	0.000 ZA 1/10W		Q1006	T2SC2412K-R-P	TR 2SC2412	
L6550	RGFR000ZTAANL		0.000 ZA 1/10W			T2SC2412K-S-P	TR 2SC2412	
L6551	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W			T2SC2812-L6-P	TR 2SC2812	
L6552 L6554	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W			T2SC2812-L7-P	TR 2SC2812	
	RGFR000ZTAANL RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W 0.000 ZA 1/10W			T2SC2812N-L6P	TR 2SC2812 TR 2SC3928	
L6555 L6556	RGFR000ZTAANL	MT-GLAZE MT-GLAZE	0.000 ZA 1/10W 0.000 ZA 1/10W			T2SC3928A1R-P T2SC3928A1S-P	TR 2SC3928	
L6557					Q1007			
L6558	RGFR000ZTAANL RGFR000ZTAANL	MT-GLAZE MT-GLAZE	0.000 ZA 1/10W 0.000 ZA 1/10W		Q1007	T2SC2412K-R-P T2SC2412K-S-P	TR 2SC2412 TR 2SC2412	
L6559	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W 0.000 ZA 1/10W			T2SC2412K-S-P T2SC2812-L6-P	TR 2SC2412	
L6561	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W 0.000 ZA 1/10W			T2SC2812-L6-P	TR 2SC2812	
L6566	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W			T2SC2812N-L6P	TR 2SC2812	
L6567	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W 0.000 ZA 1/10W			T2SC28T2N-L6P	TR 2SC3928	
LUJUI	HUI HUUUZ I AANL	WITGLAZE	0.000 LA 1/10W			12000320H1D=F	111 2000320	AIII

Schematic Location	Part No.	Description	Schematic Location	Part No.	Description
Q1200	T2SC2412K-R-P	TR 2SC2412K-T-96-R		T2SC3928A1R-P	TR 2SC3928A1R
	T2SC2412K-S-P	TR 2SC2412K-T-96-S		T2SC3928A1S-P	TR 2SC3928A1S
	T2SC2812-L6-P	TR 2SC2812-L6-TB	Q1600	T2SA1037AK-RP	TR 2SA1037AK T146 R
	T2SC2812-L7-P	TR 2SC2812-L7-TB		T2SA1037AK-SP	TR 2SA1037AK T146 S
	T2SC2812N-L6P	TR 2SC2812N-L6-TB		T2SA1037K-R-P	TR 2SA1037K-T-96-R
	T2SC3928A1R-P	TR 2SC3928A1R		T2SA1037K-S-P	TR 2SA1037K-T-96-S
	T2SC3928A1S-P	TR 2SC3928A1S		T2SA1179-M6-P	TR 2SA1179-M6
Q1201	T2SC2412K-R-P	TR 2SC2412K-T-96-R		T2SA1179-M7-P	TR 2SA1179-M7-TB
	T2SC2412K-S-P	TR 2SC2412K-T-96-S		T2SA1179N-M6P	TR 2SA1179N-M6-TB
	T2SC2812-L6-P	TR 2SC2812-L6-TB		T2SA1235A1E-P	TR 2SA1235A1E
	T2SC2812-L7-P	TR 2SC2812-L7-TB		T2SA1235A1F-P	TR 2SA1235A1F
	T2SC2812N-L6P	TR 2SC2812N-L6-TB	Q1601	T2SC2412K-R-P	TR 2SC2412K-T-96-R
	T2SC3928A1R-P	TR 2SC3928A1R		T2SC2412K-S-P	TR 2SC2412K-T-96-S
	T2SC3928A1S-P	TR 2SC3928A1S		T2SC2812-L6-P	TR 2SC2812-L6-TB
Q1202	T2SC2412K-R-P	TR 2SC2412K-T-96-R		T2SC2812-L7-P	TR 2SC2812-L7-TB
	T2SC2412K-S-P	TR 2SC2412K-T-96-S		T2SC2812N-L6P	TR 2SC2812N-L6-TB
	T2SC2812-L6-P	TR 2SC2812-L6-TB		T2SC3928A1R-P	TR 2SC3928A1R
	T2SC2812-L7-P	TR 2SC2812-L7-TB		T2SC3928A1S-P	TR 2SC3928A1S
	T2SC2812N-L6P	TR 2SC2812N-L6-TB	Q1603	T2SC2412K-R-P	TR 2SC2412K-T-96-R
	T2SC3928A1R-P	TR 2SC3928A1R		T2SC2412K-S-P	TR 2SC2412K-T-96-S
	T2SC3928A1S-P	TR 2SC3928A1S		T2SC2812-L6-P	TR 2SC2812-L6-TB
Q1203	T2SC2412K-R-P	TR 2SC2412K-T-96-R		T2SC2812-L7-P	TR 2SC2812-L7-TB
	T2SC2412K-S-P	TR 2SC2412K-T-96-S		T2SC2812N-L6P	TR 2SC2812N-L6-TB
	T2SC2812-L6-P	TR 2SC2812-L6-TB		T2SC3928A1R-P	TR 2SC3928A1R
	T2SC2812-L7-P	TR 2SC2812-L7-TB		T2SC3928A1S-P	TR 2SC3928A1S
	T2SC2812N-L6P	TR 2SC2812N-L6-TB	Q1605	T2SC2412K-R-P	TR 2SC2412K-T-96-R
	T2SC3928A1R-P	TR 2SC3928A1R		T2SC2412K-S-P	TR 2SC2412K-T-96-S
04054	T2SC3928A1S-P	TR 2SC3928A1S		T2SC2812-L6-P	TR 2SC2812-L6-TB
Q1251	T2SC2412K-R-P	TR 2SC2412K-T-96-R		T2SC2812-L7-P	TR 2SC2812-L7-TB
	T2SC2412K-S-P	TR 2SC2412K-T-96-S		T2SC2812N-L6P	TR 2SC2812N-L6-TB
	T2SC2812-L6-P T2SC2812-L7-P	TR 2SC2812-L6-TB TR 2SC2812-L7-TB		T2SC3928A1R-P	TR 2SC3928A1R TR 2SC3928A1S
	T2SC2812N-L6P	TR 2SC2812N-L6-TB	01606	T2SC3928A1S-P T2SC2412K-R-P	TR 2SC2412K-T-96-R
	T2SC3928A1R-P	TR 2SC3928A1R	Q1606	T2SC2412K-R-P	TR 2SC2412K-T-96-S
	T2SC3928A1S-P	TR 2SC3928A1S		T2SC2812-L6-P	TR 2SC2812-L6-TB
Q1252	T2SC2412K-R-P	TR 2SC2412K-T-96-R		T2SC2812-L0-P	TR 2SC2812-L7-TB
Q1232	T2SC2412K-N-P	TR 2SC2412K-T-96-S		T2SC2812N-L6P	TR 2SC2812N-L6-TB
	T2SC2812-L6-P	TR 2SC2812-L6-TB		T2SC3928A1R-P	TR 2SC3928A1R
	T2SC2812-L7-P	TR 2SC2812-L7-TB		T2SC3928A1S-P	TR 2SC3928A1S
	T2SC2812N-L6P	TR 2SC2812N-L6-TB	Q1661	T2SA1037AK-RP	TR 2SA1037AK T146 R
	T2SC3928A1R-P	TR 2SC3928A1R	41001	T2SA1037AK-SP	TR 2SA1037AK T146 S
	T2SC3928A1S-P	TR 2SC3928A1S		T2SA1037K-R-P	TR 2SA1037K-T-96-R
Q1261	T2SC2412K-R-P	TR 2SC2412K-T-96-R		T2SA1037K-S-P	TR 2SA1037K-T-96-S
ασ.	T2SC2412K-S-P	TR 2SC2412K-T-96-S		T2SA1179-M6-P	TR 2SA1179-M6
	T2SC2812-L6-P	TR 2SC2812-L6-TB		T2SA1179-M7-P	TR 2SA1179-M7-TB
	T2SC2812-L7-P	TR 2SC2812-L7-TB		T2SA1179N-M6P	TR 2SA1179N-M6-TB
	T2SC2812N-L6P	TR 2SC2812N-L6-TB		T2SA1235A1E-P	TR 2SA1235A1E
	T2SC3928A1R-P	TR 2SC3928A1R		T2SA1235A1F-P	TR 2SA1235A1F
	T2SC3928A1S-P	TR 2SC3928A1S	Q1804	T2SC2412K-R-P	TR 2SC2412K-T-96-R
Q1262	T2SC2412K-R-P	TR 2SC2412K-T-96-R		T2SC2412K-S-P	TR 2SC2412K-T-96-S
	T2SC2412K-S-P	TR 2SC2412K-T-96-S		T2SC2812-L6-P	TR 2SC2812-L6-TB
	T2SC2812-L6-P	TR 2SC2812-L6-TB		T2SC2812-L7-P	TR 2SC2812-L7-TB
	T2SC2812-L7-P	TR 2SC2812-L7-TB		T2SC2812N-L6P	TR 2SC2812N-L6-TB
	T2SC2812N-L6P	TR 2SC2812N-L6-TB		T2SC3928A1R-P	TR 2SC3928A1R

Schematic	Part No.	Description	Schematic	Part No.	Description
Location		-	Location		•
Q1871	T2SC2412K-R-P	TR 2SC2412K-T-96-R	Q5902	T2SC2412K-R-P	TR 2SC2412K-T-96-R
	T2SC2412K-S-P	TR 2SC2412K-T-96-S		T2SC2412K-S-P	TR 2SC2412K-T-96-S
	T2SC2812-L6-P	TR 2SC2812-L6-TB		T2SC2812-L6-P	TR 2SC2812-L6-TB
	T2SC2812-L7-P	TR 2SC2812-L7-TB		T2SC2812-L7-P	TR 2SC2812-L7-TB
	T2SC2812N-L6P	TR 2SC2812N-L6-TB		T2SC2812N-L6P	TR 2SC2812N-L6-TB
	T2SC3928A1R-P	TR 2SC3928A1R		T2SC3928A1R-P	TR 2SC3928A1R
05545	T2SC3928A1S-P	TR 2SC3928A1S	00400	T2SC3928A1S-P	TR 2SC3928A1S
Q5545	T2SC2412K-R-P	TR 2SC2412K-T-96-R	Q6100	T2SC2412K-R-P	TR 2SC2412K-T-96-R
	T2SC2412K-S-P	TR 2SC2412K-T-96-S		T2SC2412K-S-P	TR 2SC2412K-T-96-S
	T2SC2812-L6-P	TR 2SC2812-L6-TB		T2SC2812-L6-P	TR 2SC2812-L6-TB
	T2SC2812-L7-P	TR 2SC2812-L7-TB		T2SC2812-L7-P	TR 2SC2812-L7-TB
	T2SC2812N-L6P T2SC3928A1R-P	TR 2SC2812N-L6-TB TR 2SC3928A1R		T2SC2812N-L6P T2SC3928A1R-P	TR 2SC2812N-L6-TB TR 2SC3928A1R
		TR 2SC3928A1S			
Q5801	T2SC3928A1S-P T2SC2412K-R-P	TR 2SC2412K-T-96-R	Q6101	T2SC3928A1S-P T2SC2412K-R-P	TR 2SC3928A1S TR 2SC2412K-T-96-R
Q3601	T2SC2412K-R-P	TR 2SC2412K-T-96-S	QOTOT	T2SC2412K-R-P	TR 2SC2412K-T-96-S
	T2SC2412K-3-F	TR 2SC2812-L6-TB		T2SC2412K-3-F	TR 2SC2812-L6-TB
	T2SC2812-L0-P	TR 2SC2812-L7-TB		T2SC2812-L0-P	TR 2SC2812-L7-TB
	T2SC2812N-L6P	TR 2SC2812N-L6-TB		T2SC2812N-L6P	TR 2SC2812N-L6-TB
	T2SC3928A1R-P	TR 2SC3928A1R		T2SC3928A1R-P	TR 2SC3928A1R
	T2SC3928A1S-P	TR 2SC3928A1S		T2SC3928A1S-P	TR 2SC3928A1S
Q5802	T2SA1037AK-RP	TR 2SA1037AK T146 R	Q6250	T2SA1037AK-RP	TR 2SA1037AK T146 R
Q0002	T2SA1037AK-SP	TR 2SA1037AK T146 S	QULUU	T2SA1037AK-SP	TR 2SA1037AK T146 S
	T2SA1037K-R-P	TR 2SA1037K-T-96-R		T2SA1037K-R-P	TR 2SA1037K-T-96-R
	T2SA1037K-S-P	TR 2SA1037K-T-96-S		T2SA1037K-S-P	TR 2SA1037K-T-96-S
	T2SA1179-M6-P	TR 2SA1179-M6		T2SA1179-M6-P	TR 2SA1179-M6
	T2SA1179-M7-P	TR 2SA1179-M7-TB		T2SA1179-M7-P	TR 2SA1179-M7-TB
	T2SA1179N-M6P	TR 2SA1179N-M6-TB		T2SA1179N-M6P	TR 2SA1179N-M6-TB
	T2SA1235A1E-P	TR 2SA1235A1E		T2SA1235A1E-P	TR 2SA1235A1E
	T2SA1235A1F-P	TR 2SA1235A1F		T2SA1235A1F-P	TR 2SA1235A1F
Q5803	T2SC2412K-R-P	TR 2SC2412K-T-96-R	Q6251	T2SA1037AK-RP	TR 2SA1037AK T146 R
	T2SC2412K-S-P	TR 2SC2412K-T-96-S		T2SA1037AK-SP	TR 2SA1037AK T146 S
	T2SC2812-L6-P	TR 2SC2812-L6-TB		T2SA1037K-R-P	TR 2SA1037K-T-96-R
	T2SC2812-L7-P	TR 2SC2812-L7-TB		T2SA1037K-S-P	TR 2SA1037K-T-96-S
	T2SC2812N-L6P	TR 2SC2812N-L6-TB		T2SA1179-M6-P	TR 2SA1179-M6
	T2SC3928A1R-P	TR 2SC3928A1R		T2SA1179-M7-P	TR 2SA1179-M7-TB
	T2SC3928A1S-P	TR 2SC3928A1S		T2SA1179N-M6P	TR 2SA1179N-M6-TB
Q5804	T2SA1037AK-RP	TR 2SA1037AK T146 R		T2SA1235A1E-P	TR 2SA1235A1E
	T2SA1037AK-SP	TR 2SA1037AK T146 S		T2SA1235A1F-P	TR 2SA1235A1F
	T2SA1037K-R-P	TR 2SA1037K-T-96-R	Q6360	T2SC2412K-R-P	TR 2SC2412K-T-96-R
	T2SA1037K-S-P	TR 2SA1037K-T-96-S		T2SC2412K-S-P	TR 2SC2412K-T-96-S
	T2SA1179-M6-P	TR 2SA1179-M6		T2SC2812-L6-P	TR 2SC2812-L6-TB
	T2SA1179-M7-P	TR 2SA1179-M7-TB		T2SC2812-L7-P	TR 2SC2812-L7-TB
	T2SA1179N-M6P	TR 2SA1179N-M6-TB		T2SC2812N-L6P	TR 2SC2812N-L6-TB
	T2SA1235A1E-P	TR 2SA1235A1E		T2SC3928A1R-P	TR 2SC3928A1R
05004	T2SA1235A1F-P	TR 2SA1235A1F	00000	T2SC3928A1S-P	TR 2SC3928A1S
Q5901	T2SC2412K-R-P	TR 2SC2412K-T-96-R	Q6362	T2SC2412K-R-P	TR 2SC2412K-T-96-R
	T2SC2412K-S-P	TR 2SC2412K-T-96-S		T2SC2412K-S-P	TR 2SC2412K-T-96-S
	T2SC2812-L6-P	TR 2SC2812-L6-TB		T2SC2812-L6-P	TR 2SC2812-L6-TB
	T2SC2812-L7-P	TR 2SC2812-L7-TB		T2SC2812-L7-P	TR 2SC2812-L7-TB
	T2SC2812N-L6P	TR 2SC2812N-L6-TB		T2SC2812N-L6P	TR 2SC2812N-L6-TB
	T2SC3928A1R-P	TR 2SC3928A1R		T2SC3928A1R-P	TR 2SC3928A1R
	T2SC3928A1S-P	TR 2SC3928A1S		T2SC3928A1S-P	TR 2SC3928A1S

Schematic Location	Part No.	Description		Schematic Location	Part No.	De	scription
Q6363	TMCH6306P	TR MCH6306-TL	•	R809	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W
Q6365	T2SA1037AK-RP	TR 2SA1037AK T146 R		R812	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
	T2SA1037AK-SP	TR 2SA1037AK T146 S		R814	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
	T2SA1037K-R-P	TR 2SA1037K-T-96-R		R815	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
	T2SA1037K-S-P	TR 2SA1037K-T-96-S		R816	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
	T2SA1179-M6-P	TR 2SA1179-M6		R817	RGF1004JTCANL	MT-GLAZE	1M JA 1/10W
	T2SA1179-M7-P	TR 2SA1179-M7-TB		R821	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
	T2SA1179N-M6P	TR 2SA1179N-M6-TB		R822	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W
	T2SA1235A1E-P	TR 2SA1235A1E		R823	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
	T2SA1235A1F-P	TR 2SA1235A1F		R824	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
				R828	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W
	RESISTORS	8		R829	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W
RB5510	1AV4R1D31024G	R-NETWORK 1KX4 1/32W		R830	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
RB5511	1AV4R1D31024G	R-NETWORK 1KX4 1/32W		R831	RGF4702JTCANL	MT-GLAZE	47K JA 1/10W
RB5570	1AV4R1D31504G	R-NETWORK 15X4 1/32W		R832	RGF4702JTCANL	MT-GLAZE	47K JA 1/10W
RB5571	1AV4R1D31504G	R-NETWORK 15X4 1/32W		R833	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W
RB5572	1AV4R1D31504G	R-NETWORK 15X4 1/32W		R834	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W
RB5573	1AV4R1D31504G	R-NETWORK 15X4 1/32W		R838	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
RB5574	1AV4R1D31504G	R-NETWORK 15X4 1/32W		R839	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
RB5576	1AV4R1D31504G	R-NETWORK 15X4 1/32W		R840	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
RB5577	1AV4R1D31504G	R-NETWORK 15X4 1/32W		R841	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
RB5578	1AV4R1D31504G	R-NETWORK 15X4 1/32W		R842	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
RB5579	1AV4R1D31504G	R-NETWORK 15X4 1/32W		R843	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
RB5580	1AV4R1D31504G	R-NETWORK 15X4 1/32W		R844	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
RB5581	1AV4R1D31504G	R-NETWORK 15X4 1/32W		R845	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
RB5583	1AV4R1D31504G	R-NETWORK 15X4 1/32W		R846	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
RB6121	1AV4R1D33304G	R-NETWORK 33X4 1/32W		R847	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W
RB6122	1AV4R1D33304G	R-NETWORK 33X4 1/32W		R848	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W
RB6123	1AV4R1D33304G	R-NETWORK 33X4 1/32W		R849	RGF1003JTCANL	MT-GLAZE	100K JA 1/10W
RB6201	1AV4R1D33304G	R-NETWORK 33X4 1/32W		R850	RGF1003JTCANL	MT-GLAZE	100K JA 1/10W
RB6202	1AV4R1D33304G	R-NETWORK 33X4 1/32W		R851	RGF1003JTCANL	MT-GLAZE	100K JA 1/10W
RB6203	1AV4R1D33304G	R-NETWORK 33X4 1/32W		R854	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W
RB6204	1AV4R1D33304G	R-NETWORK 33X4 1/32W		R855	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W
RB6205	1AV4R1D33304G	R-NETWORK 33X4 1/32W		R856	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W
RB6206	1AV4R1D33304G	R-NETWORK 33X4 1/32W		R857	RGF1003JTCANL	MT-GLAZE	100K JA 1/10W
RB6355	1AV4R1D30R04G	R-NETWORK 0X4 1/32W		R858	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W
R001 R002	RGF3301JTCANL RGF3301JTCANL	MT-GLAZE 3.3K JA 1/10W MT-GLAZE 3.3K JA 1/10W		R859	RGF1002JTCANL RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
R003	RGF1801JTCANL	MT-GLAZE 3.5K JA 1/10W		R860 R861	RGF1002JTCANL	MT-GLAZE MT-GLAZE	10K JA 1/10W 10K JA 1/10W
R004	RGF1801JTCANL	MT-GLAZE 1.8K JA 1/10W		R862	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
R004	RGAR000ZTDANL	MT-GLAZE 0.000 ZA 1/2W		R863	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
R006	RGAR000ZTDANL	MT-GLAZE 0.000 ZA 1/2W		R864	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
R008	RGF1002JTCANL	MT-GLAZE 0.000 ZA 1/2W		R865	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
R014	RGB2R20JTBANL	MT-GLAZE 2.2 JA 1/4W		R866	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
R015	RGB2R20JTBANL	MT-GLAZE 2.2 JA 1/4W		R867	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
R016	RGB2R20JTBANL	MT-GLAZE 2.2 JA 1/4W		R868	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W
R017	RGB2R20JTBANL	MT-GLAZE 2.2 JA 1/4W		R873	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W
R105	RGF47R0JTCANL	MT-GLAZE 47 JA 1/10W		R874	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
R109	RGF4700JTCANL	MT-GLAZE 470 JA 1/10W		R875	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
R110	RGFR000ZTCANL	MT-GLAZE 0.000 ZA 1/10W		R883	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R802	RGF4701JTCANL	MT-GLAZE 4.7K JA 1/10W		R884	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R803	RGF4701JTCANL	MT-GLAZE 4.7K JA 1/10W		R885	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R804	RGF1002JTCANL	MT-GLAZE 10K JA 1/10W		R888	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
R807	RGF6801JTCANL	MT-GLAZE 6.8K JA 1/10W		R889	RGF1004JTCANL	MT-GLAZE	1M JA 1/10W

Schematic Location	Part No.	Des	cription	Schematic Location	Part No.	Des	cription
R890	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W	R1073	RGF75R0JTCANL	MT-GLAZE	75 JA 1/10W
R891	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W	R1074	RGF82R0JTCANL	MT-GLAZE	82 JA 1/10W
R893	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W	R1075	RGF82R0JTCANL	MT-GLAZE	82 JA 1/10W
R895	RGF4703JTCANL	MT-GLAZE	470K JA 1/10W	R1200	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W
R1000	RGF47R0JTCANL	MT-GLAZE	47 JA 1/10W	R1201	RGF47R0JTCANL	MT-GLAZE	47 JA 1/10W
R1001	RGF75R0JTCANL	MT-GLAZE	75 JA 1/10W	R1202	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
R1002	RGF47R0JTCANL	MT-GLAZE	47 JA 1/10W	R1203	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
R1003	RGF75R0JTCANL	MT-GLAZE	75 JA 1/10W	R1204	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W
R1004	RGF2200JTCANL	MT-GLAZE	220 JA 1/10W	R1205	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
R1005	RGF47R0JTCANL	MT-GLAZE	47 JA 1/10W	R1206	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
R1006	RGF75R0JTCANL	MT-GLAZE	75 JA 1/10W	R1207	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
R1007	RGF2203JTCANL	MT-GLAZE	220K JA 1/10W	R1208	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
R1008	RGF2203JTCANL	MT-GLAZE	220K JA 1/10W	R1209	RGF47R0JTCANL	MT-GLAZE	47 JA 1/10W
R1009	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W	R1210	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
R1010	RGF3303JTCANL	MT-GLAZE	330K JA 1/10W	R1211	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
R1011	RGF2203JTCANL	MT-GLAZE	220K JA 1/10W	R1212	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R1012	RGF2203JTCANL	MT-GLAZE	220K JA 1/10W	R1253	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W
R1013	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W	R1254	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
R1014	RGF3303JTCANL	MT-GLAZE	330K JA 1/10W	R1255	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
R1016	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W	R1256	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
R1019	RGF47R0JTCANL	MT-GLAZE	47 JA 1/10W	R1257	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
R1020	RGF75R0JTCANL	MT-GLAZE	75 JA 1/10W	R1261	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W
R1025	RGF47R0JTCANL	MT-GLAZE	47 JA 1/10W	R1262	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R1026	RGF75R0JTCANL	MT-GLAZE MT-GLAZE	75 JA 1/10W	R1263	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R1031 R1032	RGF47R0JTCANL RGF75R0JTCANL	MT-GLAZE	47 JA 1/10W 75 JA 1/10W	R1264 R1265	RGFR000ZTCANL RGFR000ZTCANL	MT-GLAZE MT-GLAZE	0.000 ZA 1/10W 0.000 ZA 1/10W
R1032	RGF47R0JTCANL	MT-GLAZE		R1266		MT-GLAZE	2.2K JA 1/10W
R1037	RGF75R0JTCANL	MT-GLAZE	47 JA 1/10W 75 JA 1/10W	R1267	RGF2201JTCANL RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R1043	RGF47R0JTCANL	MT-GLAZE	47 JA 1/10W	R1269	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W 0.000 ZA 1/10W
R1043	RGF75R0JTCANL	MT-GLAZE	75 JA 1/10W	R1271	RGF2201JTCANL	MT-GLAZE	2.2K JA 1/10W
R1044	RGF47R0JTCANL	MT-GLAZE	47 JA 1/10W	R1600	RGF3300FTCANL	MT-GLAZE	330 FA 1/10W
R1050	RGF75R0JTCANL	MT-GLAZE	75 JA 1/10W	R1601	RGF1200FTCANL	MT-GLAZE	120 FA 1/10W
R1051	RGF4700JTCANL	MT-GLAZE	470 JA 1/10W	R1602	RGF1001FTCANL	MT-GLAZE	1K FA 1/10W
R1052	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W	R1606	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
R1053	RGF1003JTCANL	MT-GLAZE	100K JA 1/10W	R1607	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
R1054	RGF4700JTCANL	MT-GLAZE	470 JA 1/10W	R1608	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
R1055	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W	R1609	RGF47R0JTCANL	MT-GLAZE	47 JA 1/10W
R1056	RGF1003JTCANL	MT-GLAZE	100K JA 1/10W	R1611	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
R1057	RGF2203JTCANL	MT-GLAZE	220K JA 1/10W	R1612	RGF5600FTCANL	MT-GLAZE	560 FA 1/10W
R1058	RGF2203JTCANL	MT-GLAZE	220K JA 1/10W	R1614	RGF4700JTCANL	MT-GLAZE	470 JA 1/10W
R1059	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W	R1615	RGF2202JTCANL	MT-GLAZE	22K JA 1/10W
R1060	RGF3303JTCANL	MT-GLAZE	330K JA 1/10W	R1616	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
R1061	RGF2203JTCANL	MT-GLAZE	220K JA 1/10W	R1617	RGF1501FTCANL	MT-GLAZE	1.5K FA 1/10W
R1062	RGF2203JTCANL	MT-GLAZE	220K JA 1/10W	R1618	RGF1201FTCANL	MT-GLAZE	1.2K FA 1/10W
R1063	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W	R1619	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
R1064	RGF3303JTCANL	MT-GLAZE	330K JA 1/10W	R1620	RGF2702FTCANL	MT-GLAZE	27K FA 1/10W
R1065	RGF2203JTCANL	MT-GLAZE	220K JA 1/10W	R1621	RGF1002FTCANL	MT-GLAZE	10K FA 1/10W
R1066	RGF2203JTCANL	MT-GLAZE	220K JA 1/10W	R1622	RGF1201FTCANL	MT-GLAZE	1.2K FA 1/10W
R1067	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W	R1623	RGF1203JTCANL	MT-GLAZE	120K JA 1/10W
R1068	RGF3303JTCANL	MT-GLAZE	330K JA 1/10W	R1624	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
R1069	RGF2203JTCANL	MT-GLAZE	220K JA 1/10W	R1625	RGF4702JTCANL	MT-GLAZE	47K JA 1/10W
R1070	RGF2203JTCANL	MT-GLAZE	220K JA 1/10W	R1626	RGF1202JTCANL	MT-GLAZE	12K JA 1/10W
R1071	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W	R1630	RGF1501FTCANL	MT-GLAZE	1.5K FA 1/10W
R1072	RGF3303JTCANL	MT-GLAZE	330K JA 1/10W	R1631	RGF1501FTCANL	MT-GLAZE	1.5K FA 1/10W

Schematic Location	Part No.	Des	scription		Schematic Location	Part No.	De	scription
R1632	RGF1001FTCANL	MT-GLAZE	1K FA 1/10W	•	R1906	RGF3901JTCANL	MT-GLAZE	3.9K JA 1/10W
R1640	RGF6801FTCANL	MT-GLAZE	6.8K FA 1/10W		R1907	RGF5601JTCANL	MT-GLAZE	5.6K JA 1/10W
R1641	RGF5602FTCANL	MT-GLAZE	56K FA 1/10W		R1909	RGF2200JTCANL	MT-GLAZE	220 JA 1/10W
R1642	RGF1002FTCANL	MT-GLAZE	10K FA 1/10W		R1910	RGF2200JTCANL	MT-GLAZE	220 JA 1/10W
R1646	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W		R1911	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W
R1647	1AV4L26B1940G	INDUCTOR,	120 OHM		R1912	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
	1LB4L26B0700G	INDUCTOR,	120 OHM		R3200	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
R1648	1AV4L26B1940G	INDUCTOR,	120 OHM		R3201	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
	1LB4L26B0700G	INDUCTOR,	120 OHM		R5507	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R1649	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W		R5508	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R1656	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W		R5509	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
R1657	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W		R5510	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
R1658	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W		R5513	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R1660	RGF1501FTCANL	MT-GLAZE	1.5K FA 1/10W		R5514	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R1664	RGF1501FTCANL	MT-GLAZE	1.5K FA 1/10W		R5515	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W
R1665	RGF1001FTCANL	MT-GLAZE	1K FA 1/10W		R5516	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W
R1666	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W		R5517	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R1667	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W		R5518	RGF1501JTCANL	MT-GLAZE	1.5K JA 1/10W
R1668	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W		R5519	RGF1501JTCANL	MT-GLAZE	1.5K JA 1/10W
R1674	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W		R5520	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R1675	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W		R5521	RGF47R0JTCANL	MT-GLAZE	47 JA 1/10W
R1685	RGFR000ZTAANL	MT-GLAZE	0.000 ZA 1/10W		R5523	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W
R1687	RGF3302JTCANL	MT-GLAZE	33K JA 1/10W		R5524	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
R1688	RGF2202JTCANL	MT-GLAZE	22K JA 1/10W		R5525	RGF3900FTCANL	MT-GLAZE	390 FA 1/10W
R1800 R1802	RGF1000JTCANL RGF1000JTCANL	MT-GLAZE MT-GLAZE	100 JA 1/10W		R5527 R5528	RGF3302JTCANL	MT-GLAZE MT-GLAZE	33K JA 1/10W 820 FA 1/10W
R1803	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W 100 JA 1/10W		R5529	RGF8200FTCANL RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R1804	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W		R5530	RGF3300JTCANL	MT-GLAZE	330 JA 1/10W
R1805	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W		R5531	RGF3300JTCANL	MT-GLAZE	330 JA 1/10W
R1806	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W		R5532	RGF1501JTCANL	MT-GLAZE	1.5K JA 1/10W
R1807	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W		R5538	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
R1808	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W		R5540	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
R1809	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W		R5542	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
R1827	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W		R5544	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
R1828	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W		R5545	RGF2201JTCANL	MT-GLAZE	2.2K JA 1/10W
R1829	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W		R5546	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
R1830	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W		R5547	RGF3301JTCANL	MT-GLAZE	3.3K JA 1/10W
R1831	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W		R5548	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W
R1832	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W		R5549	RGF1802JTCANL	MT-GLAZE	18K JA 1/10W
R1835	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W		R5555	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W
R1838	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W		R5556	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W
R1853	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W		R5557	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W
R1854	RGF4702JTCANL	MT-GLAZE	47K JA 1/10W		R5563	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W
R1857	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W		R5564	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
R1859	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W		R5570	RGF4702JTCANL	MT-GLAZE	47K JA 1/10W
R1861	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W		R5572	RGF15R0JTCANL	MT-GLAZE	15 JA 1/10W
R1871	RGF3300JTCANL	MT-GLAZE	330 JA 1/10W		R5573	RGF15R0JTCANL	MT-GLAZE	15 JA 1/10W
R1872	RGF2202JTCANL	MT-GLAZE	22K JA 1/10W		R5574	RGF15R0JTCANL	MT-GLAZE	15 JA 1/10W
R1874	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W		R5575	RGF15R0JTCANL	MT-GLAZE	15 JA 1/10W
R1901	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W		R5576	RGF15R0JTCANL	MT-GLAZE	15 JA 1/10W
R1902	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W		R5577	RGF15R0JTCANL	MT-GLAZE	15 JA 1/10W
R1903	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W		R5578	RGF15R0JTCANL	MT-GLAZE	15 JA 1/10W
R1904	RGF1801JTCANL	MT-GLAZE	1.8K JA 1/10W		R5579	RGF15R0JTCANL	MT-GLAZE	15 JA 1/10W
R1905	RGF2201JTCANL	MT-GLAZE	2.2K JA 1/10W		R5580	RGF15R0JTCANL	MT-GLAZE	15 JA 1/10W

Schematic Location	Part No.	Des	cription	Schematic Location	Part No.	Des	scription
R5581	RGF15R0JTCANL	MT-GLAZE	15 JA 1/10W	R6088	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R5582	RGF15R0JTCANL	MT-GLAZE	15 JA 1/10W	R6089	RGF1001FTCANL	MT-GLAZE	1K FA 1/10W
R5583	RGF15R0JTCANL	MT-GLAZE	15 JA 1/10W	R6093	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R5584	RGF15R0JTCANL	MT-GLAZE	15 JA 1/10W	R6100	RGF2200JTCANL	MT-GLAZE	220 JA 1/10W
R5585	RGF15R0JTCANL	MT-GLAZE	15 JA 1/10W	R6101	RGF2201JTCANL	MT-GLAZE	2.2K JA 1/10W
R5588	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W	R6104	RGF2202JTCANL	MT-GLAZE	22K JA 1/10W
R5590	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W	R6106	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R5592	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W	R6107	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R5700	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W	R6108	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R5701	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W	R6110	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W
R5751	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W	R6111	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
R5752	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W	R6112	RGF1004JTCANL	MT-GLAZE	1M JA 1/10W
R5753	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W	R6113	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
R5755	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W	R6114	RGF4702JTCANL	MT-GLAZE	47K JA 1/10W
R5756	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W	R6115	RGF4702JTCANL	MT-GLAZE	47K JA 1/10W
R5757	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W	R6117	RGF3302JTCANL	MT-GLAZE	33K JA 1/10W
R5758	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W	R6118	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W
R5803	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W	R6125	RGF47R0JTCANL	MT-GLAZE	47 JA 1/10W
R5804	RGF6800JTCANL	MT-GLAZE	680 JA 1/10W	R6126	RGF47R0JTCANL	MT-GLAZE	47 JA 1/10W
R5805	RGF6800JTCANL	MT-GLAZE	680 JA 1/10W	R6132	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W
R5807	RGF6800JTCANL	MT-GLAZE	680 JA 1/10W	R6174	RGF4702JTCANL	MT-GLAZE	47K JA 1/10W
R5808	RGF47R0JTCANL	MT-GLAZE	47 JA 1/10W	R6176	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
R5809	RGF47R0JTCANL	MT-GLAZE	47 JA 1/10W	R6200	RGF3302JTCANL	MT-GLAZE	33K JA 1/10W
R5813	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W	R6201	RGF33R0JTCANL	MT-GLAZE	33 JA 1/10W
R5814	RGF6800JTCANL	MT-GLAZE	680 JA 1/10W	R6204	RGF33R0JTCANL	MT-GLAZE	33 JA 1/10W
R5815	RGF6800JTCANL	MT-GLAZE	680 JA 1/10W	R6208	RGF4700JTCANL	MT-GLAZE	470 JA 1/10W
R5817	RGF6800JTCANL	MT-GLAZE	680 JA 1/10W	R6209	RGF33R0JTCANL	MT-GLAZE	33 JA 1/10W
R5818	RGF47R0JTCANL	MT-GLAZE	47 JA 1/10W	R6213	RGF33R0JTCANL	MT-GLAZE	33 JA 1/10W
R5901	RGF1202JTCANL	MT-GLAZE MT-GLAZE	12K JA 1/10W	R6216	RGF33R0JTCANL	MT-GLAZE	33 JA 1/10W
R5902 R5903	RGF1002JTCANL RGF4702JTCANL	MT-GLAZE	10K JA 1/10W 47K JA 1/10W	R6221 R6222	RGF4700JTCANL RGF33R0JTCANL	MT-GLAZE MT-GLAZE	470 JA 1/10W 33 JA 1/10W
R5903	RGF4702JTCANL	MT-GLAZE	47K JA 1/10W 47K JA 1/10W	R6225	RGF10R0JTCANL	MT-GLAZE	10 JA 1/10W
R5905	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W	R6229	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R5906	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W	R6231	RGF10R0JTCANL	MT-GLAZE	10 JA 1/10W
R5907	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W	R6233	RGF33R0JTCANL	MT-GLAZE	33 JA 1/10W
R5908	RGF2202JTCANL	MT-GLAZE	22K JA 1/10W	R6235	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
R5951	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W	R6236	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
R5953	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W	R6237	RGF33R0JTCANL	MT-GLAZE	33 JA 1/10W
R5954	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W	R6238	RGF33R0JTCANL	MT-GLAZE	33 JA 1/10W
R5955	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W	R6240	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R5956	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W	R6241	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R5957	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W	R6244	RGF33R0JTCANL	MT-GLAZE	33 JA 1/10W
R5958	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W	R6250	RGF6802FTCANL	MT-GLAZE	68K FA 1/10W
R5959	RGF1003JTCANL	MT-GLAZE	100K JA 1/10W	R6251	RGF1003JTCANL	MT-GLAZE	100K JA 1/10W
R5974	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W	R6252	RGF2200JTCANL	MT-GLAZE	220 JA 1/10W
R5975	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W	R6253	RGF2200JTCANL	MT-GLAZE	220 JA 1/10W
R5976	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W	R6254	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
R6050	RGF5600FTCANL	MT-GLAZE	560 FA 1/10W	R6255	RGF1004JTCANL	MT-GLAZE	1M JA 1/10W
R6051	RGF1501FTCANL	MT-GLAZE	1.5K FA 1/10W	R6257	RGF3301JTCANL	MT-GLAZE	3.3K JA 1/10W
R6052	RGF1201FTCANL	MT-GLAZE	1.2K FA 1/10W	R6258	RGF3001FTCANL	MT-GLAZE	3K FA 1/10W
R6053	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W	R6261	RGF3901JTCANL	MT-GLAZE	3.9K JA 1/10W
R6085	RGF4701FTCANL	MT-GLAZE	4.7K FA 1/10W	R6262	RGF3300JTCANL	MT-GLAZE	330 JA 1/10W
R6086	RGF4701FTCANL	MT-GLAZE	4.7K FA 1/10W	R6263	RGF3300JTCANL	MT-GLAZE	330 JA 1/10W
R6087	RGF1001FTCANL	MT-GLAZE	1K FA 1/10W	R6266	RGF2200JTCANL	MT-GLAZE	220 JA 1/10W
	- · -	· -			· · -		


	,		
Schematic Location	Part No.	Des	cription
R6267	RGF2200JTCANL	MT-GLAZE	220 JA 1/10W
R6283	RGF2203JTCANL	MT-GLAZE	220K JA 1/10W
R6284	RGF2203JTCANL	MT-GLAZE	220K JA 1/10W
R6285	RGF2203JTCANL	MT-GLAZE	220K JA 1/10W
R6286	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R6287	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R6300	RGF2203JTCANL	MT-GLAZE	220K JA 1/10W
R6301	RGF4701FTCANL	MT-GLAZE	4.7K FA 1/10W
R6302	RGF4701FTCANL	MT-GLAZE	4.7K FA 1/10W
R6303	RGF4701FTCANL	MT-GLAZE	4.7K FA 1/10W
R6304	RGF4701FTCANL	MT-GLAZE	4.7K FA 1/10W
R6305	RGF4701FTCANL	MT-GLAZE	4.7K FA 1/10W
R6306	RGF4701FTCANL	MT-GLAZE	4.7K FA 1/10W
R6309	RGF1502FTCANL	MT-GLAZE	15K FA 1/10W
R6310	RGF1502FTCANL	MT-GLAZE	15K FA 1/10W
R6311	RGF47R0JTCANL	MT-GLAZE	47 JA 1/10W
R6321	RGF4701FTCANL	MT-GLAZE	4.7K FA 1/10W
R6322	RGF4701FTCANL	MT-GLAZE	4.7K FA 1/10W
R6323	RGF4701FTCANL	MT-GLAZE	4.7K FA 1/10W
R6324	RGF4701FTCANL	MT-GLAZE	4.7K FA 1/10W
R6325	RGF4701FTCANL	MT-GLAZE	4.7K FA 1/10W
R6326	RGF4701FTCANL	MT-GLAZE	4.7K FA 1/10W
R6329	RGF1502FTCANL	MT-GLAZE	15K FA 1/10W
R6330	RGF1502FTCANL	MT-GLAZE	15K FA 1/10W
R6331	RGF47R0JTCANL	MT-GLAZE	47 JA 1/10W
R6340	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W
R6341	RGF6800JTCANL	MT-GLAZE	680 JA 1/10W
R6342	RGF6800JTCANL	MT-GLAZE	680 JA 1/10W
R6343	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R6346	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R6348	RGF3300JTCANL	MT-GLAZE	330 JA 1/10W
R6364	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R6365	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R6366	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
R6367	RGF1002JTCANL RGF1002JTCANL	MT-GLAZE MT-GLAZE	10K JA 1/10W 10K JA 1/10W
R6369			470K JA 1/10W
R6370 R6376	RGF4703JTCANL RGFR000ZTCANL	MT-GLAZE MT-GLAZE	0.000 ZA 1/10W
R6379	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R6380	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
N0300			0.000 ZA 1/10W
	SWITCHES		
SW1901	1AV4S10B0900J	SWITCH, PU	
	1AV4S10B5650J	SWITCH, PU	
SW1902	1AV4S10B0900J	SWITCH, PU	
	1AV4S10B5650J	SWITCH, PU	
SW1903	1AV4S10B0900J	SWITCH, PU	
	1AV4S10B5650J	SWITCH, PU	
SW1904	1AV4S10B0900J	SWITCH, PU	
	1AV4S10B5650J	SWITCH, PU	
SW1905	1AV4S10B0900J	SWITCH, PU	
	1AV4S10B5650J	SWITCH, PU	SH 1P-1TX1

Schematic Location	Part No.	Description					
CRYSTAL / FILTERS							
X801	1AV4V10B0560N	OSC, CRYSTAL 32.768KHZ					
X6101	1AV4V10B8280G	OSC, CRYSTAL 25.000MHZ					
X6200	1AV4F31B0540N	CERAMIC FILTER 4.5MHZ					
X6201	1AV4V10B7390G	OSC, CRYSTAL 24.576MHZ					
MISCELLANEOUS							
A001	1AA0B10N222D0	ASSY, PWB, MAIN-N4SG					
A002	1AA0B10N22500	ASSY, PWB, CONTROL-N4SG					
A1902	1AV4U20B99401	UNIT, REMOCON RECEIVER					
 ▲A6100	1AV4F1ZAZ0010	TUNER, USA/IF/DIGI-ANALOG					
 £L901	1AV4T40B83300	LCD (M190A1-L020)					
K1003	1LB4J31B01101	TERMINAL, BOARD					
K1004	1LB4J12B11700	JACK, RCA-9					
K1005	1LB4J12B11600	JACK, RCA-6					
SP901	1LB4A10B04600	SPEAKER, 8					
	1LB4A10B08100	SPEAKER, 8					
SP902	1LB4A10B04600	SPEAKER, 8					
	1LB4A10B08100	SPEAKER, 8					
 ₩901	1AV4W10B17900	CORD, POWER-2.0MK-VTR-02					
	1AV4W10B18000	CORD, POWER-2.0MK-VTR-02					

INVERTER / POWER BOARD

⚠ U901 1AV4U20C09000 UNIT, INVERTER-POWER BRD Non-servicable part. No discreet parts are supplied for this PC board.

CABINET PARTS LIST

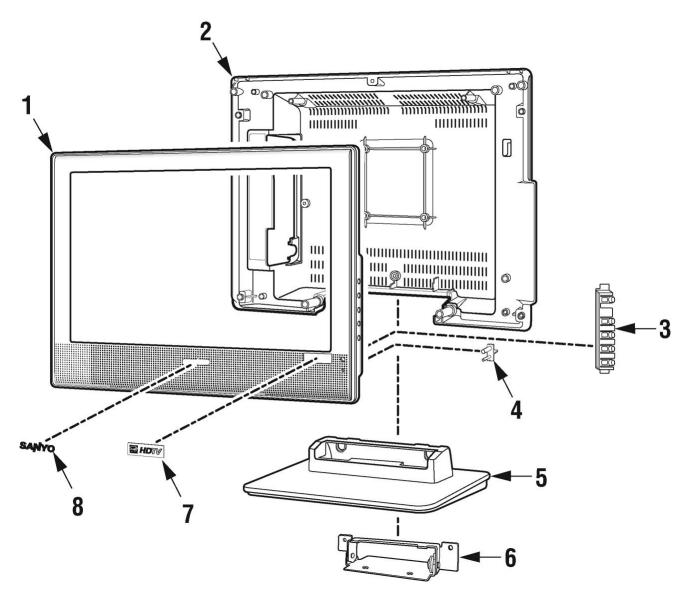


CABINET PARTS LIST


ACCESSORY PARTS LIST

KEY NO.	PARTS NO.	DESCRIPTION	 KEY NO.	PARTS NO.	DESCRIPTION	
1	1AA2CAM0588	CABINET FRONT-N4TE		1AA6P1P0247	OWNER'S MANUAL (English)	
2	1AA2CBM0429	CABINET BACK-N4TE		1AA6P1P0250	OWNER'S MANUAL (Spanish)	
3	1AA2BUM0529	BUTTON UNITED-N3HE		1JC6P1P0251	OWNER'S MANUAL (French)	
4	1AA2DEM0444	DEC IND		1LB0U10B01801	ASSY, REMOCON	
5	1AA2SDM0172	STAND COVER		1AA2RCM0305	RC BATTERY LID	
6	1AA0HGF0015	ASSY HINGE				
7	1AA2DES0915	DEC SHEET HDTV				
8	1AV2BAAS016A-	BADGE, SANYO				


COMPONENT AND TESTPOINT LOCATIONS

MAIN BOARD PARTS SIDE

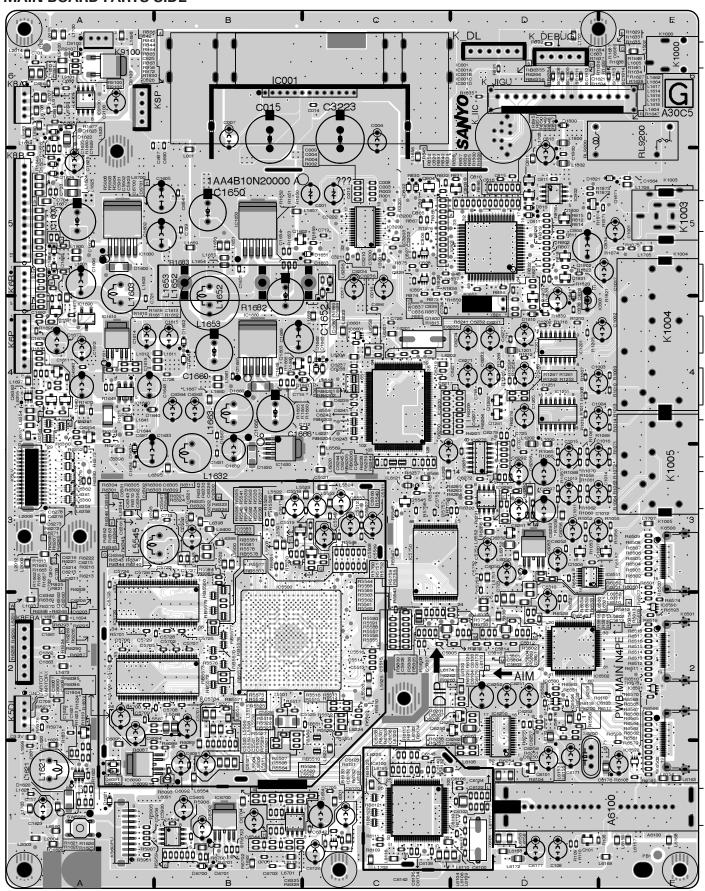


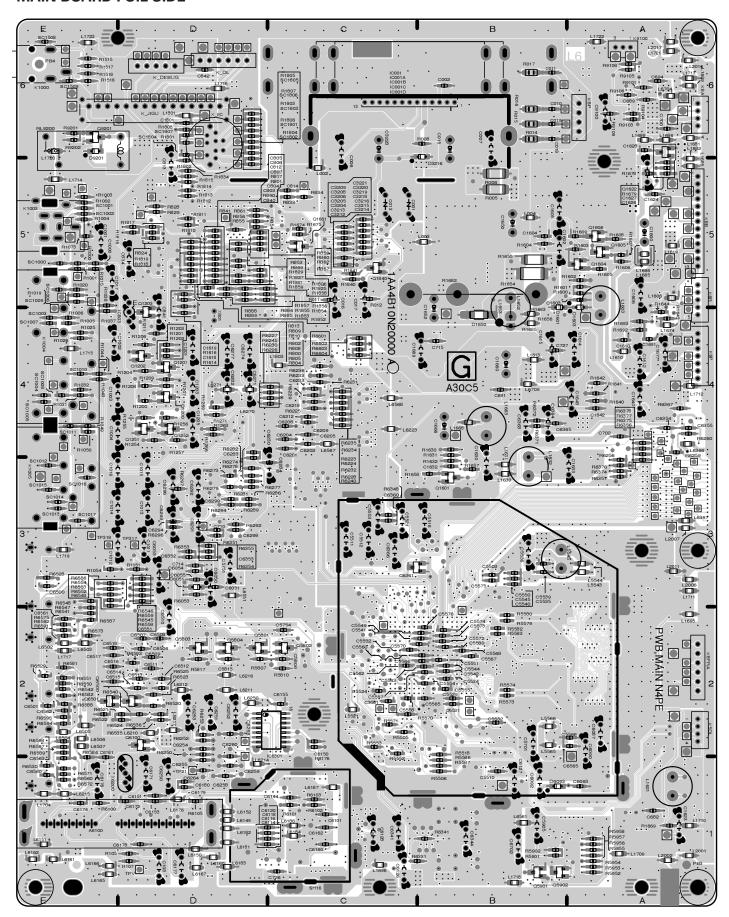

BLOCK DIAGRAM POWER LINES

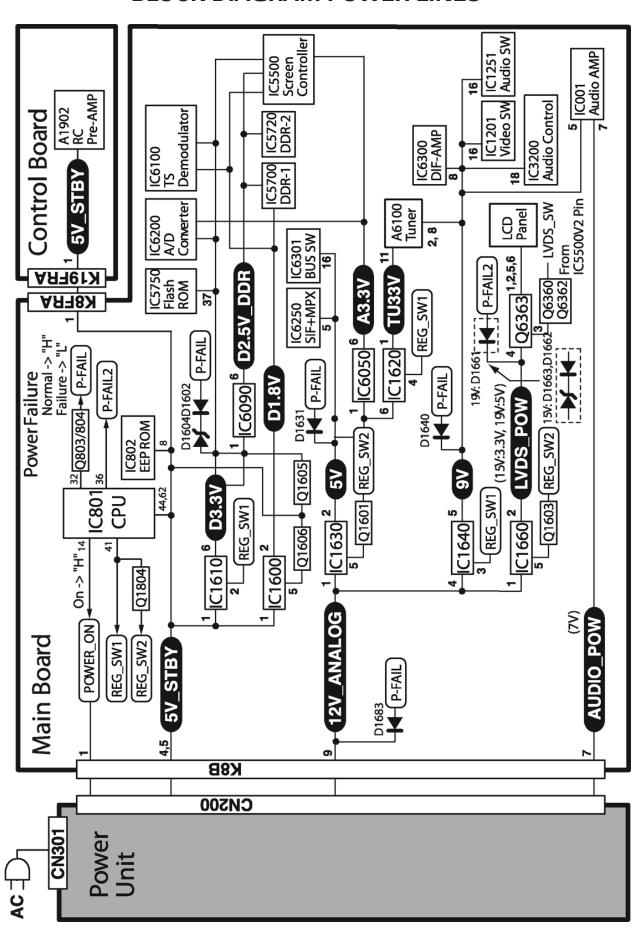


BLOCK DIAGRAM SIGNAL LINES

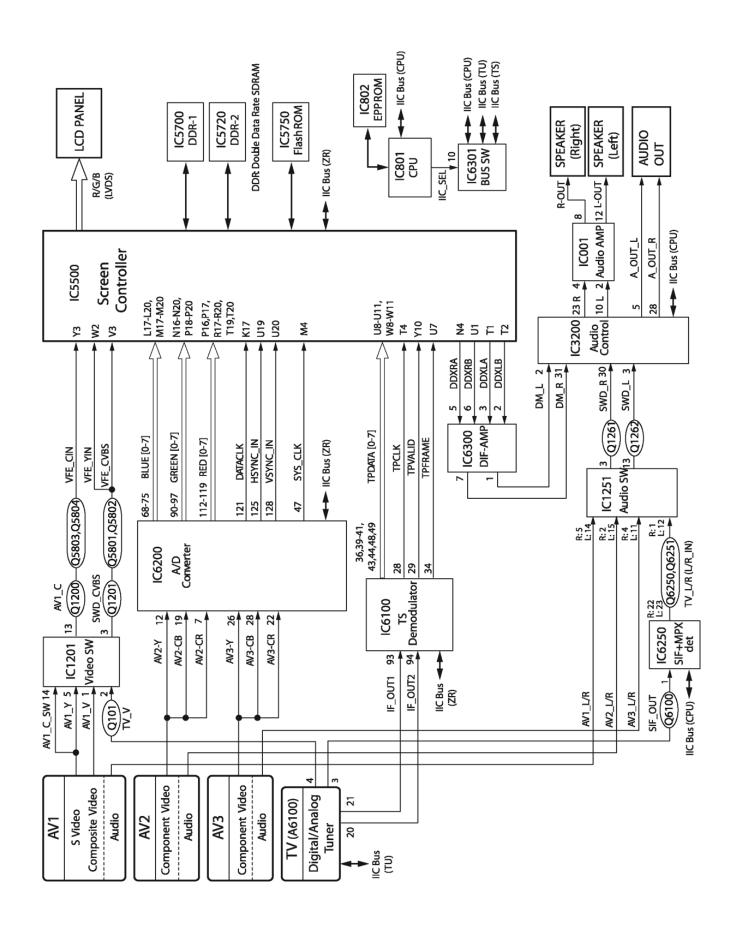


IC BLOCK DIAGRAMS


IC001, Audio AMP

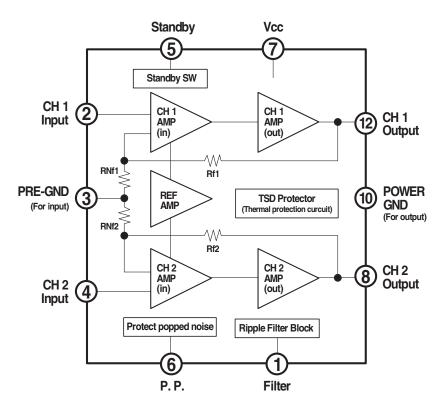


IC1201, IC1251 Video and Audio Select

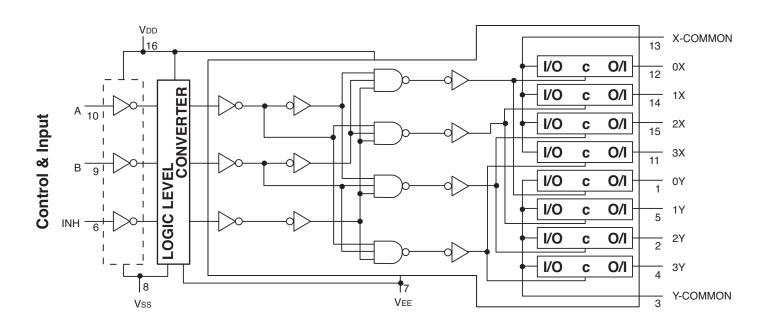

IC1600, DC to DC Converter

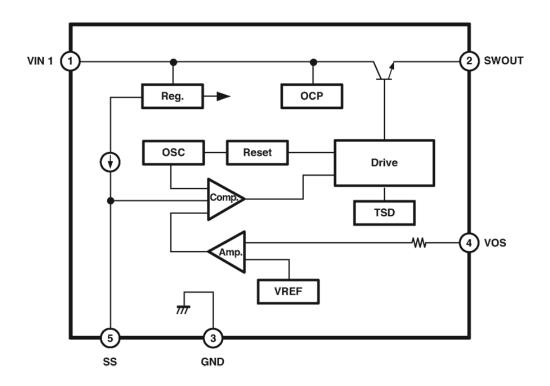


IC1620, DC to DC Converter

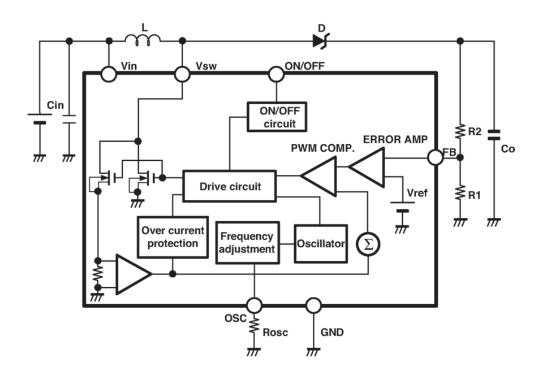



IC BLOCK DIAGRAMS (CONT.)

IC1630, DC to DC Converter

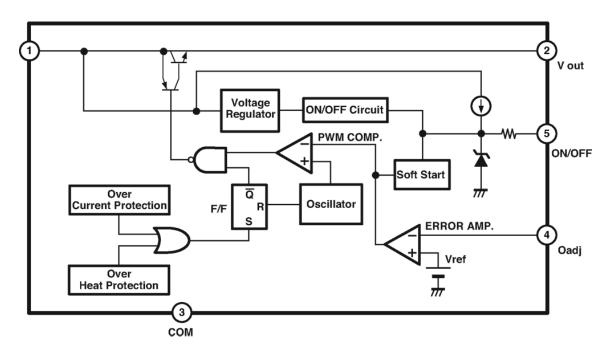


IC1640, DC to DC Converter

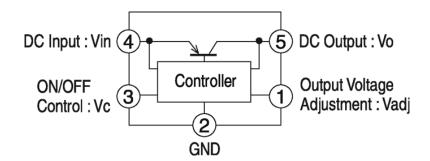

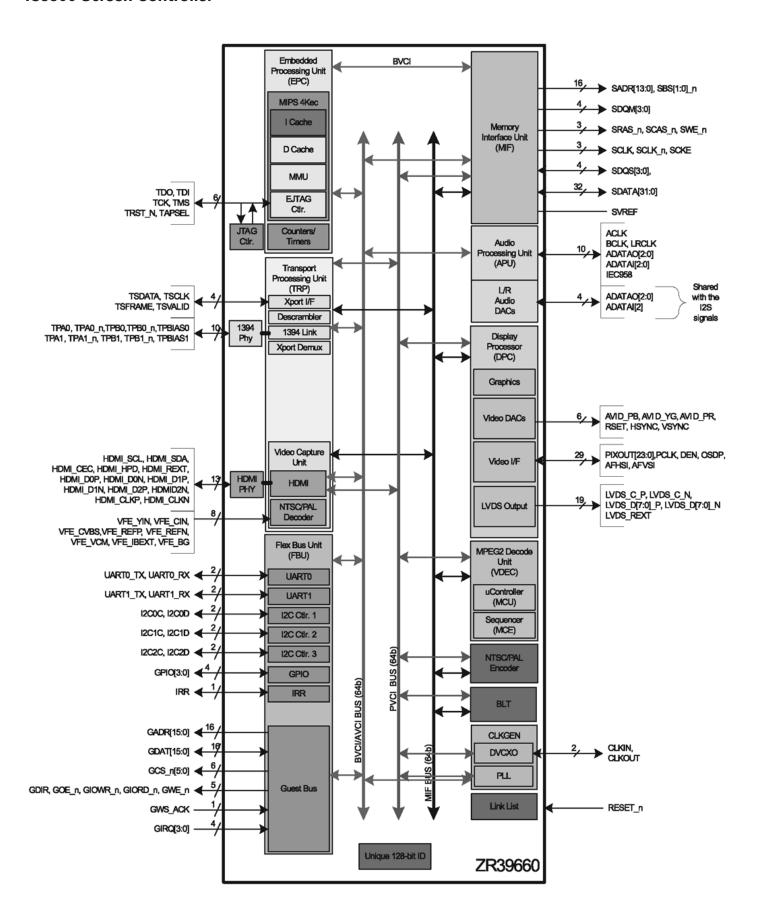


IC BLOCK DIAGRAMS (CONT.)


IC5700, IC5720 DDR: Double Data Rate SDRAM

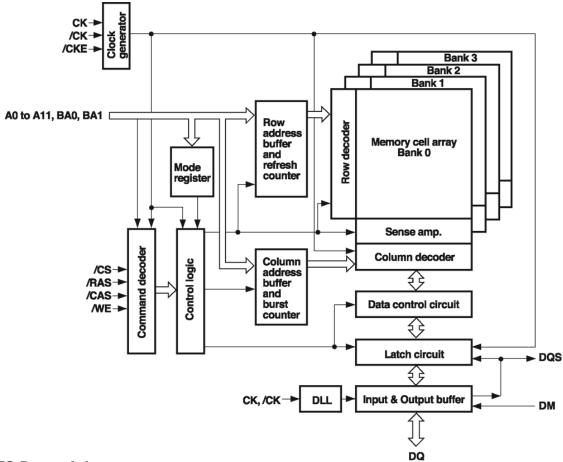

IC6100, TS Demodulator

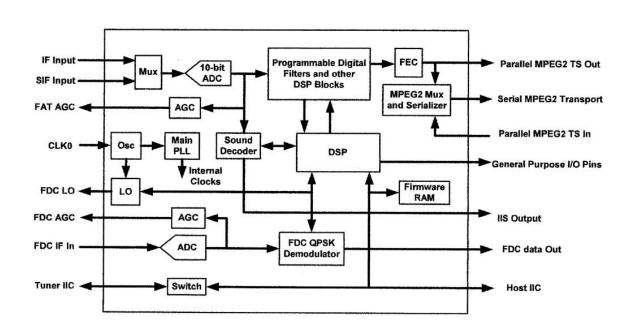


IC6200, A/D Converter

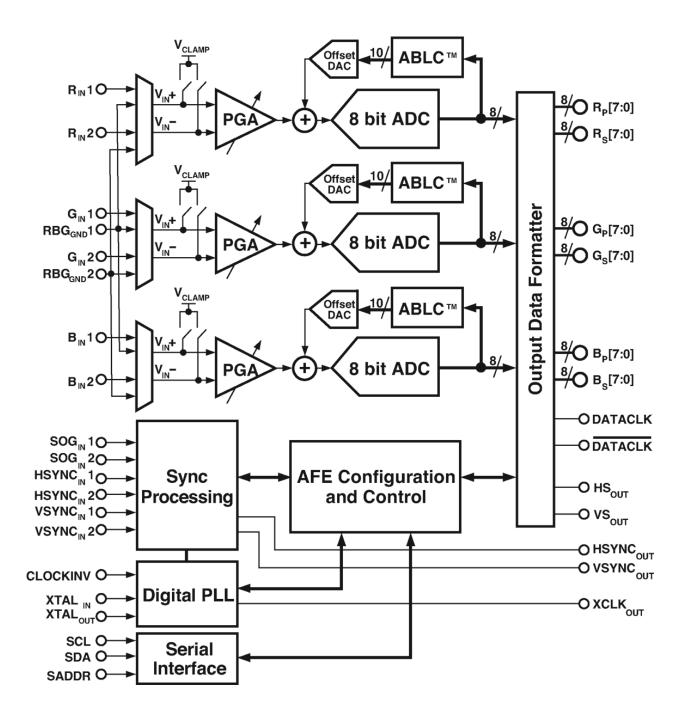


TROUBLESHOOTING FLOW CHARTS

NO POWER

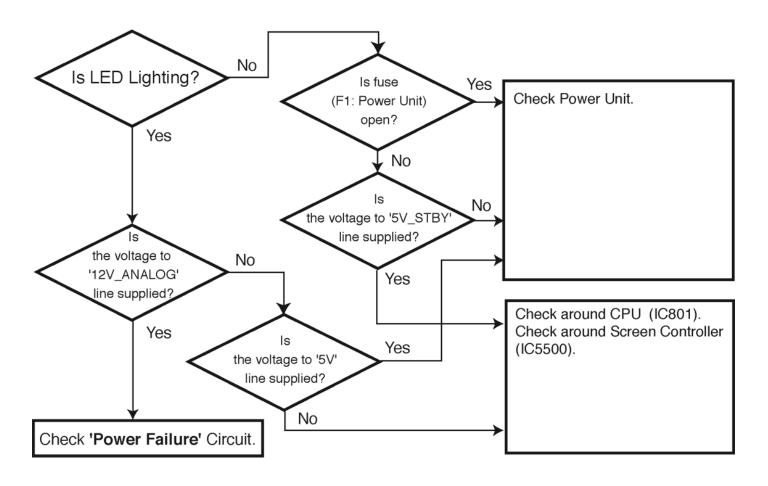


NO VIDEO

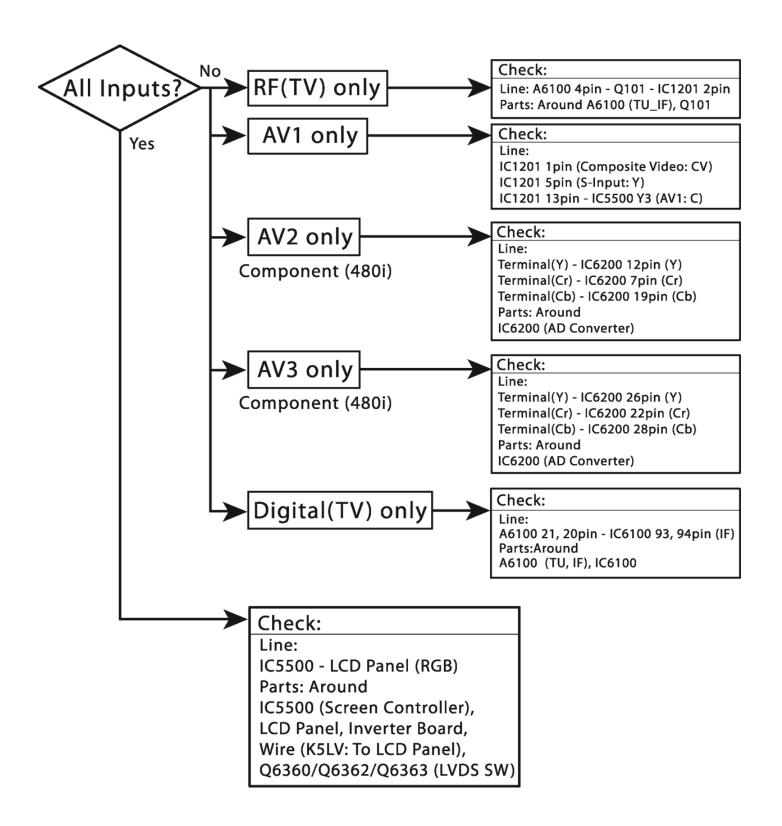

TROUBLESHOOTING FLOW CHARTS (CONT.)

NO AUDIO

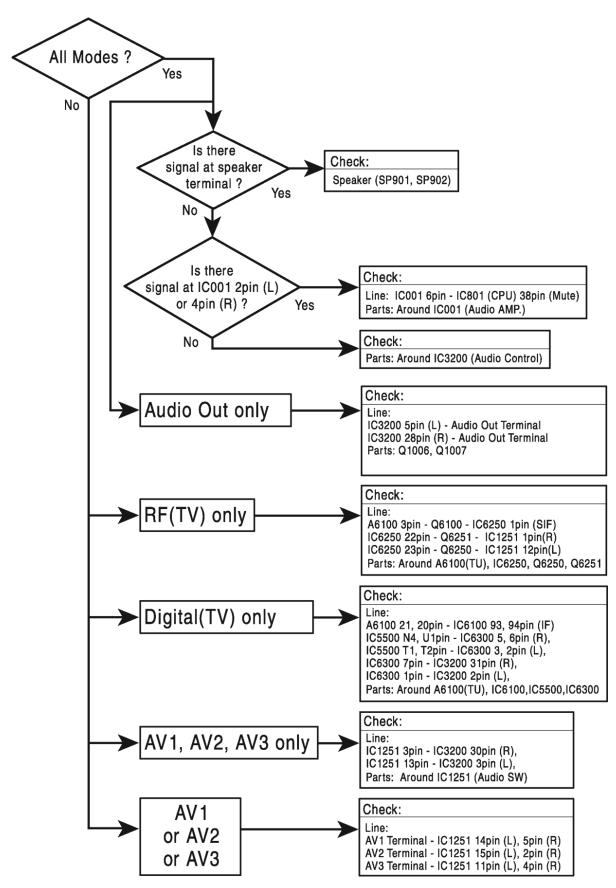

CONTROL PORT FUNCTIONS

System Control (CPU : IC801)

Pin	Name	Function	I/O	Description
1	CVin	NA	IN	GND (0Vdc)
2	P70/INT0/TOLCP	LINE OFF	IN	Detect AC Voltage Reduction (Normal: High)
3	P71/INT1/TOHCP	Reserve	OUT	(Open)
4	P72/INT2/TOIN	Display Enable	OUT	Display Enable for PDP
5	P73/INT3/TOIN	RC in	IN.	RC Input
6	AN0	Key in	IN	Key Input
7	AN1	AFT S-Figure in	IN	AFT S-Figure Input
8	P82/AN2	Tuner SW	OUT	Tuner BUS-SW (Analog-RF: High, Other: Low)
9	P83	Reserve	OUT	(Open)
10	P84/AN4	Reserve	OUT	(Open)
11	P85/AN5	VS-ON	OUT	VS-ON (for PDP) ON: High, OFF: Low
12	P86/AN6	Panel Ready	IN	Panel Ready (for PDP) OK: High, NG: Low
13	P87/AN7	SIN	IN	S-Detect S-Detect
14	P30/SO6	TV Relay out	OUT	POWER ON/OFF SW On: High, OFF: Low
15	SB6	IIC-BUS for NV	I/O	(DATA) Active 'L' for IIC data NV
16	SCK6	IIC-BUS for NV	OUT	(CLOCK) Active 'L' for IIC clock NV
17	SB6	IIC-BUS for TV	I/O	(DATA) Active 'L' for IIC data TV
18	SCK6	IIC-BUS for TV	OUT	(CLOCK) Active 'L' for IIC clock TV
19	DBGP0	DBGP0	I/O	Terminal for De-Bug 1
20	DBGP1	DBGP1	I/O	Terminal for De-Bug 2
21	DBGP2	DBGP2	IN	Terminal for De-Bug 3
22	PC0	ENA/DATA1	I/O	Writing on board (ENA/DATA1)
23	PC1	DATA0	I/O	Writing on board (DATA0)
24	PC2	CLK	IN	Writing on board (CLK)
25	PC3	TB in	IN	Detection for Video Signal (Time base: H)
26	PC4	Reserve	OUT	(Open)
27	P00	Reserve	OUT	(Open)
28	P01	AV SW1	OUT	Selection for AV Selector 1
29	P02	AV SW2	OUT	Selection for AV Selector 2
30	P03	AV SW3	OUT	Selection for AV Selector 3
31	P04	AV SW4	OUT	Selection for AV Selector 4
32	P05	Power Fail-1 in	IN	TV Power Error (Error: Low)
33	P06	STATUS in	IN	For factory use
34	P07	Ack out	OUT	For factory use
35	P20/SO1	5V Discharge	OUT	
36	P21/S11/SB1	Power Fail-2 in	IN	LVDS Power Error (Error: Low)
37	P22/SCK1	Monitor-Out Mute	OUT	Mute ON: Low, OFF, High
38	P23	Audio MUTE	OUT	Audio Mute ON: High, OFF: Low
39	UTX	UART OUT	OUT	Digital Module microcomputer piece confidence
40	URX	UART IN	IN	Digital Module microcomputer piece confidence
41	P26/OSDCK1	REG SW	OUT	REG ON/OFF SW ON: High, OFF:Low
42	BL2	Reserve	OUT	(Open)
43	VSS2	Vss Dower IN	IN	GND (0Vdc)
44	VDD2	Power IN	IN	5V (5Vdc±10%)
45	P10/S00 P11/SI0/SB0	Reserve	OUT	(Open)
46	L I I/9I0/9B0	Reserve	OUT	(Open)

CONTROL PORT FUNCTIONS (Cont.)

System Control (CPU : IC801 Cont.)

Pin	Name	Function	I/O	Description
47	P12/SCK0	PDP/LCD	IN	Option Setting (PDP: High, LCD: Low)
48	P13	Panel Size 3	IN	Panel Size
49	P14	Panel Size 2	IN	Panel Size
50	P15	Panel Size 1	IN	Panel Size
51	P16	Panel Size 0	IN	Panel Size
52	P17	Reserve	IN	(Open)
53	BL1	NA	OUT	(Open)
54	В	NA	OUT	(Open)
55	G	NA	OUT	(Open)
56	R	NA	OUT	(Open)
57	HSB	Hsync	IN	GND (0Vdc)
58	VSB	Vsync	IN	GND (0Vdc)
59	VSS1	Vss	IN	GND (0Vdc)
60	XT1	Xin	IN	Main Clock IN/OUT Fosc=8MHz
61	XT2	Xout	OUT	(Should be connected between IN/OUT pins.)
62	VDD1	Power IN	IN	5V (5Vdc±10%)
63	RESB	RESET in	IN	Reset terminal
64	FILT	FILT out	OUT	PLL Filter

Mode Switching Table

Mode	AVSW1 (pin28)	AVSW2 (pin29)	AVSW3 (pin30)
Analog Tuner	Low	High	Low
AV1(CVBS)	High	High	Low
AV1(S)	High	Low	Low
AV2(Component 2)	Low	Low	High
AV3(Component 3)	Low	Low	Low
Digital Tuner or HDMI	Low	Low	Low
HDMI (DVI)	Low	Low	Low

SCHEMATIC DIAGRAMS

NOTES ON SCHEMATIC DIAGRAMS

- 1. All resistance values in ohms K=1,000 M=1,000,000.
- 2. Resistors specified with resistance value are "1/6DJ."
- 3. Resistors specified with type of resistor, tolerence and resistance value are "1/4."
- 4. Unless otherwise noted on schematic, all capacitor values less than 1 are expressed in μ F (Micro Farad), and the values more than 1 are in pF.
- 5. All capacitors are 50 WV rating unless oterhwise noted.
- 6. Unless otherwise noted on schematic, voltage reading taken with VOM from point indicated to chassis ground. Voltage reading taken using color-bar signal VHF channel 5, all controls at normal. Line voltage at 120 volts. Some voltages may vary with signal strength.
- 7. Waveforms were taken with color-bar signal and controls set for normal picture. Waveforms marked with an * may vary with signal strength.
- 8. The Symbol (indicates a fusible resistor, which protects the circuit from possible short circuits.
- 9. Parts enclosed with are related with X-radiation.
- 10. Isolation border line. Cold Side Hot Side
- 11. Schematic part location numbers may not always match the schematic symbols.

The schematic symbols and part descriptions are correct and should be used.

The part descriptions will be listed under the location number in the parts list.

ELECTROSTATICALLY SENSATIVE DEVICES

Many solid-state devices (especially Integrated Circuits) are Electrostatically Sensitive, and, therefore, require special handling techniques as described under "Servicing Electrostatically Sensitive Devices," on page two in this service literature.


SERVICE NOTES:

- 1. When replacing parts on circuit boards, clamp the lead wires to terminals before soldering.
- 2. When replacing high wattage resistors on circuit board, keep the resistor body 10 mm (3/8) from circuit board.
- 3. Keep wires away from high voltage and high temperature components.


PRODUCT SAFETY NOTICE

THE COMPONENTS DESIGNATED BY A ON THIS SCHEMATIC DIAGRAM DESIGNATE COMPONENTS WHOSE VALUES ARE OF SPECIAL SIGNIFICANCE TO PRODUCT SAFETY. SHOULD ANY COMPONENT DESIGNATED BY A NEED TO BE REPLACED, USE ONLY THE PART DESIGNATED IN THE PARTS LIST. DO NOT DEVIATE FROM THE RESISTANCE, WATTAGE AND VOLTAGE RATINGS SHOWN.

IC, DIODE, AND TRANSISTOR PIN LAYOUTS

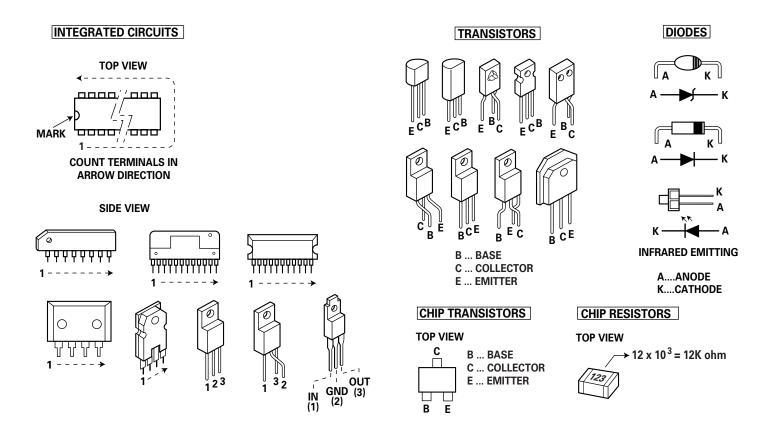


PC BOARD CONNECTIONS AND LOCATIONS

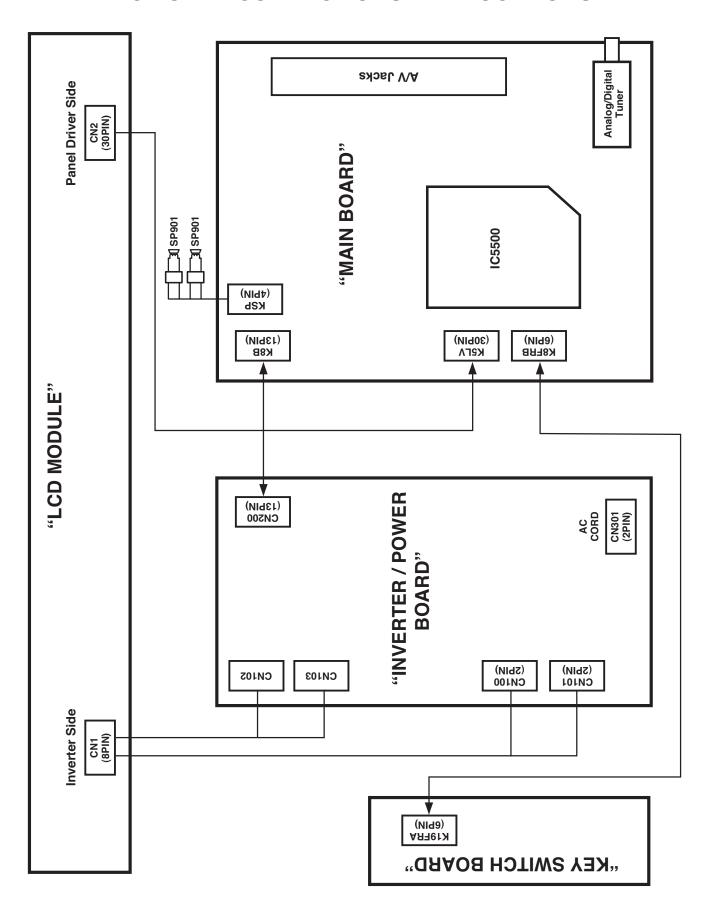


CAPACITOR AND RESISTOR CODE CHART

CAPACITOR (Example)

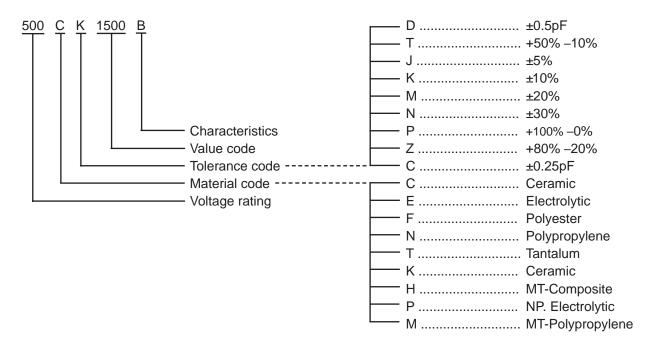


RESISTOR (Example)

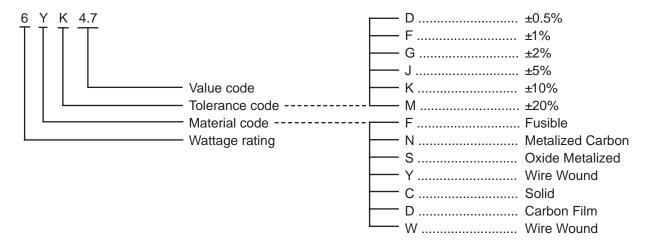


For parts or service contact

Sanyo Manfacturing Corporation P.O. Box 2000 3333 Sanyo Road Forrest City, Arkansas 72335-2000

February 2007 SMC Published in U.S.A.

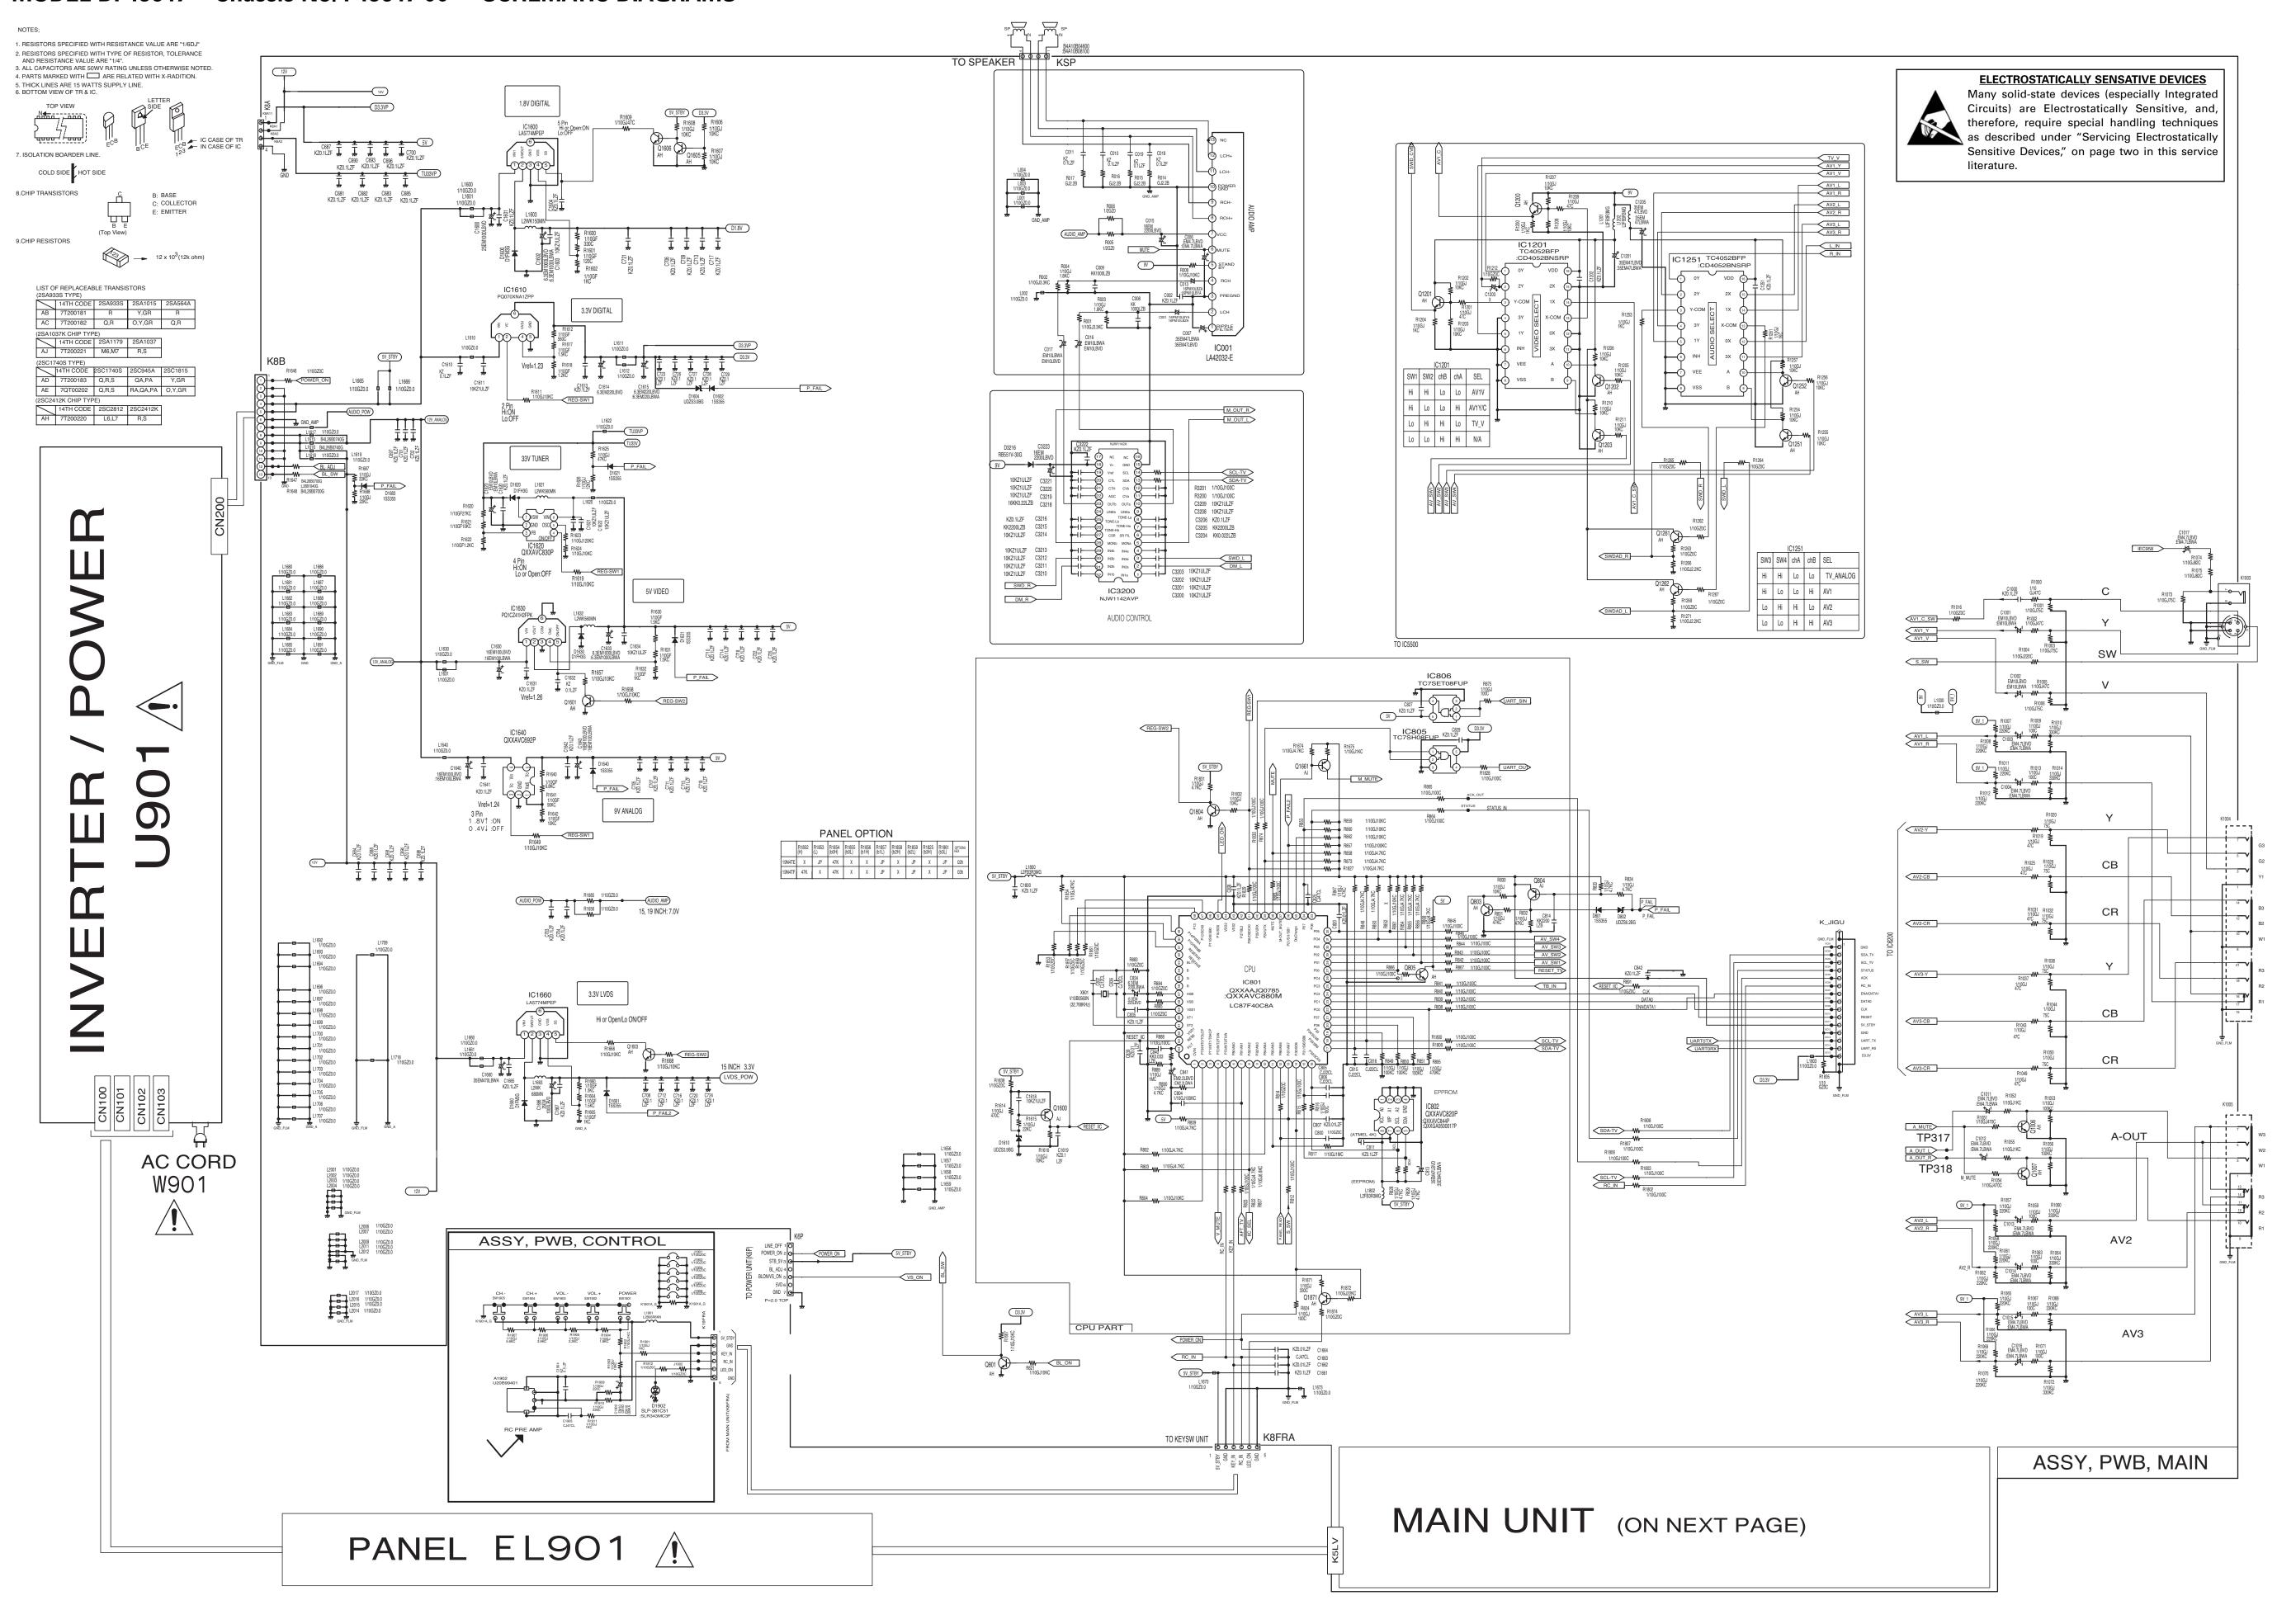

— 49 **—**

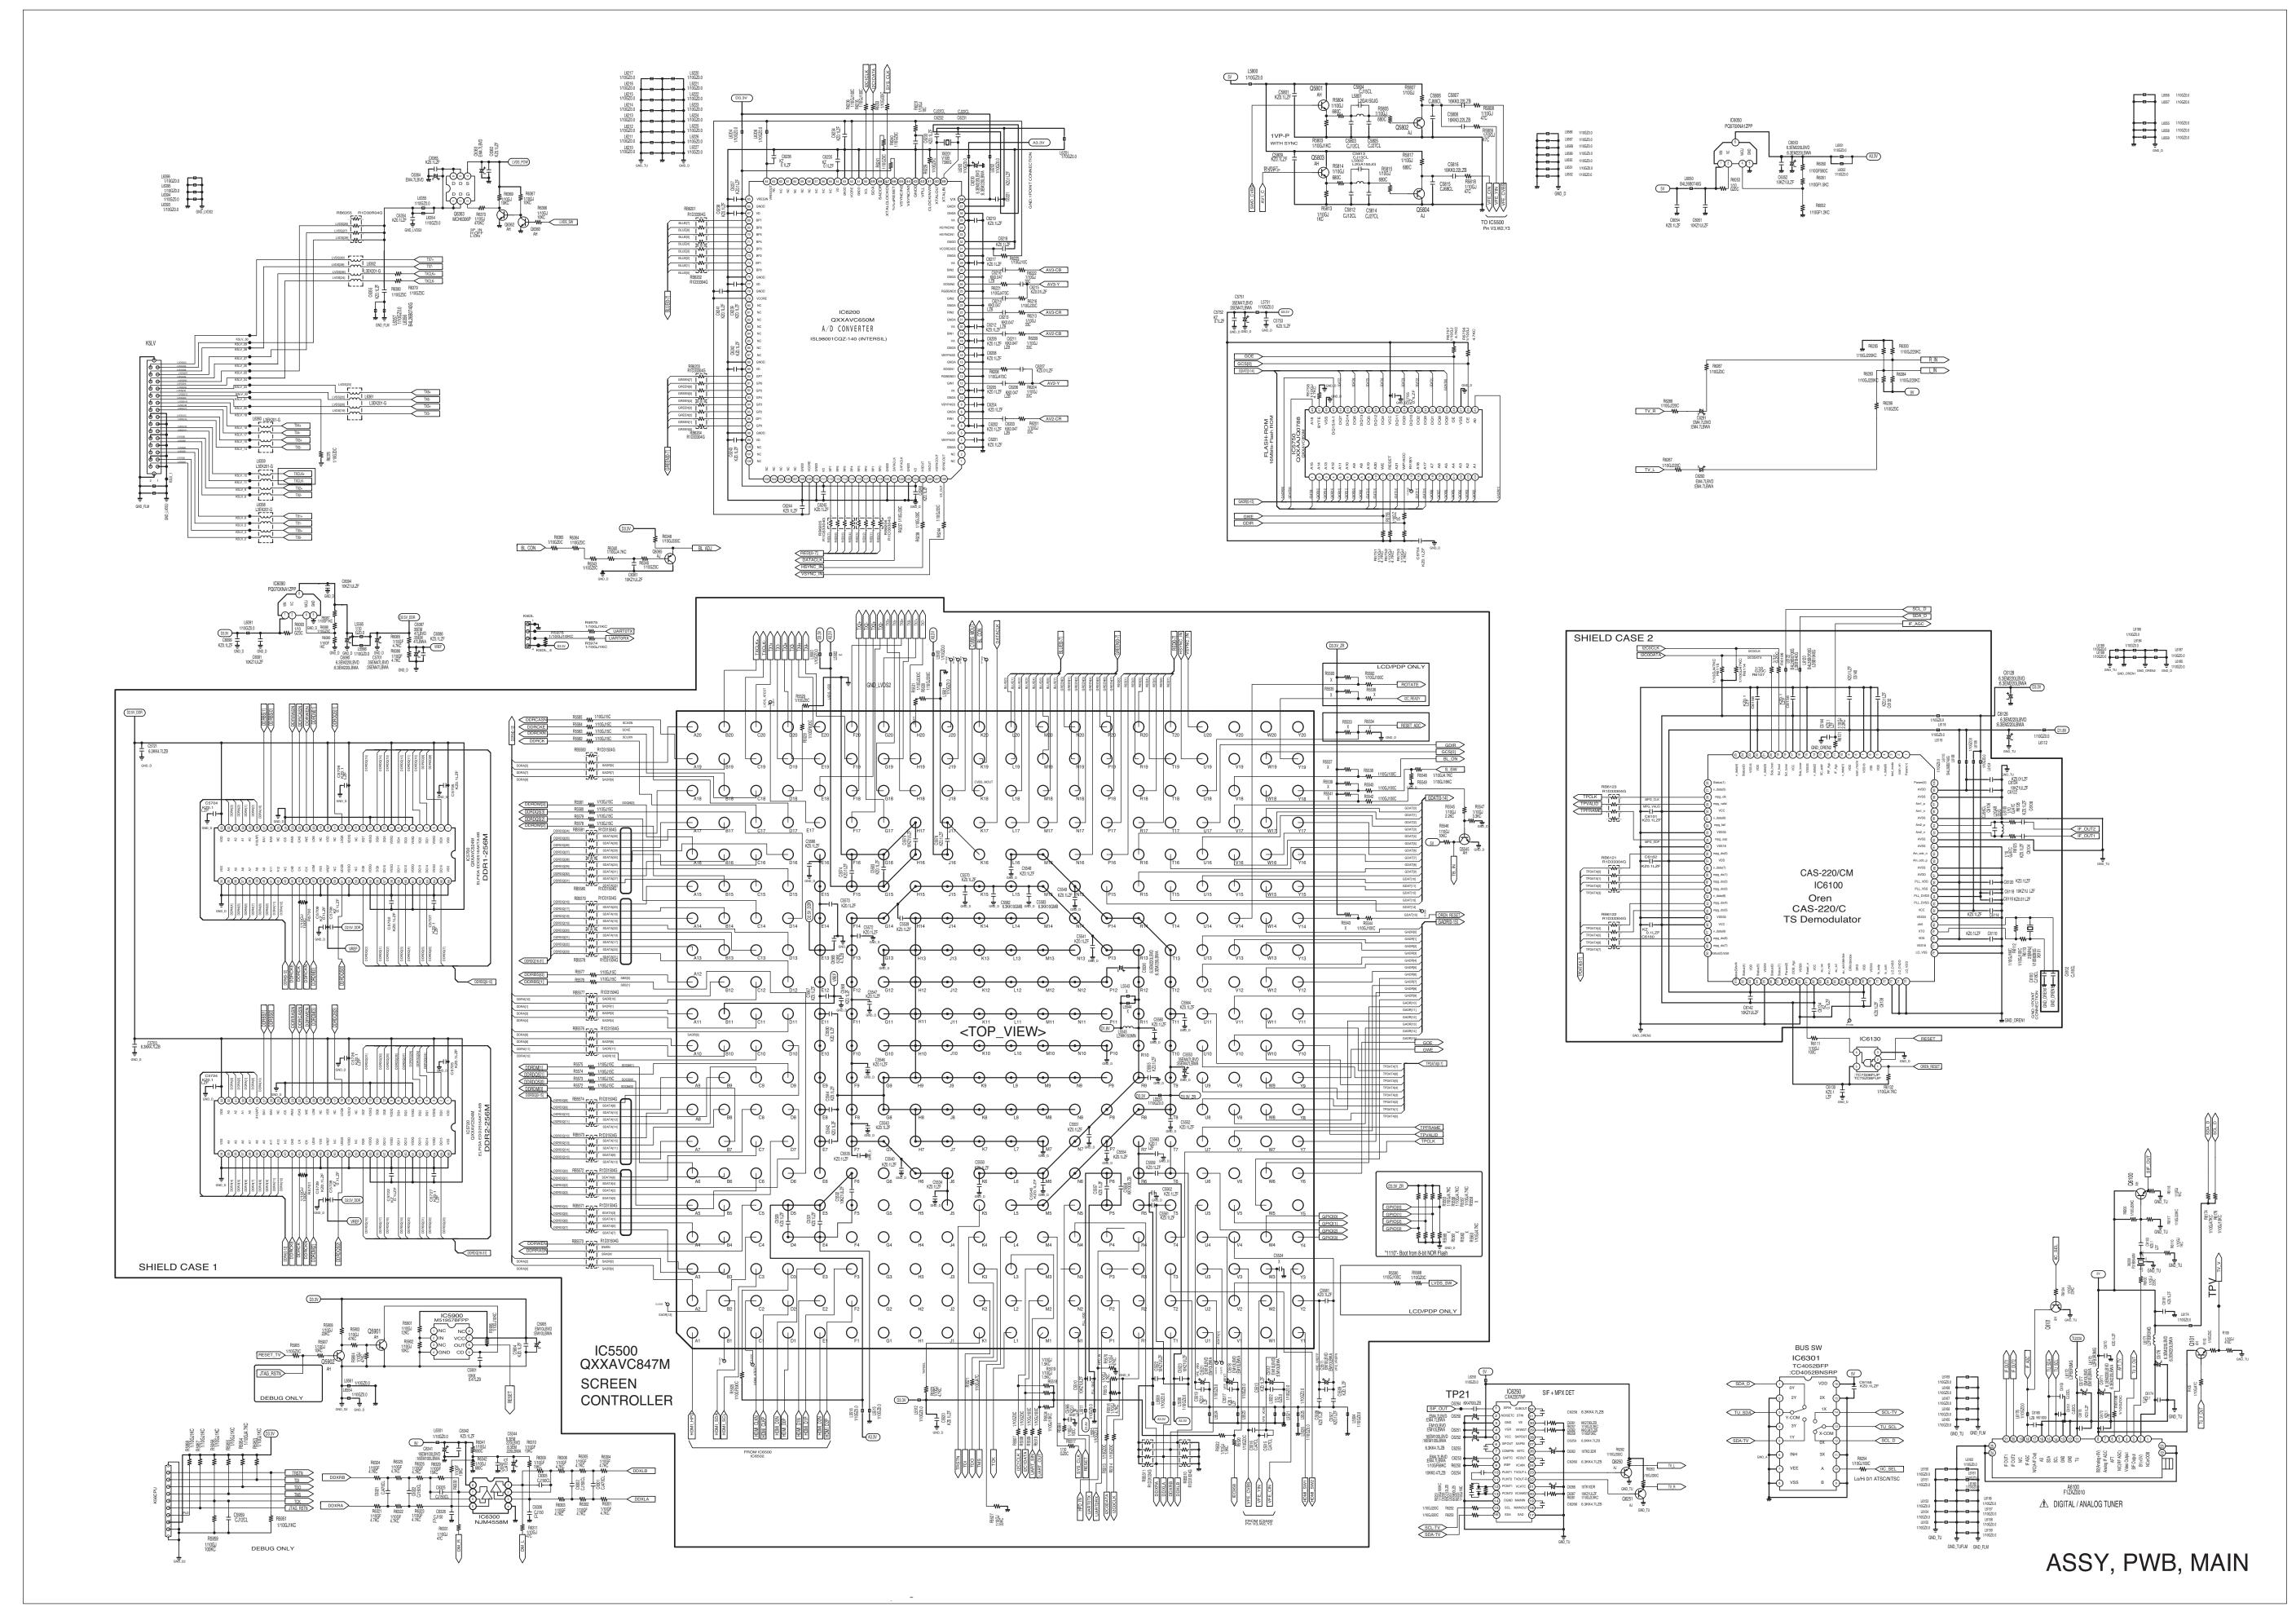

— 51 —

— 52 —